


# ARTSOUND P200 PRO

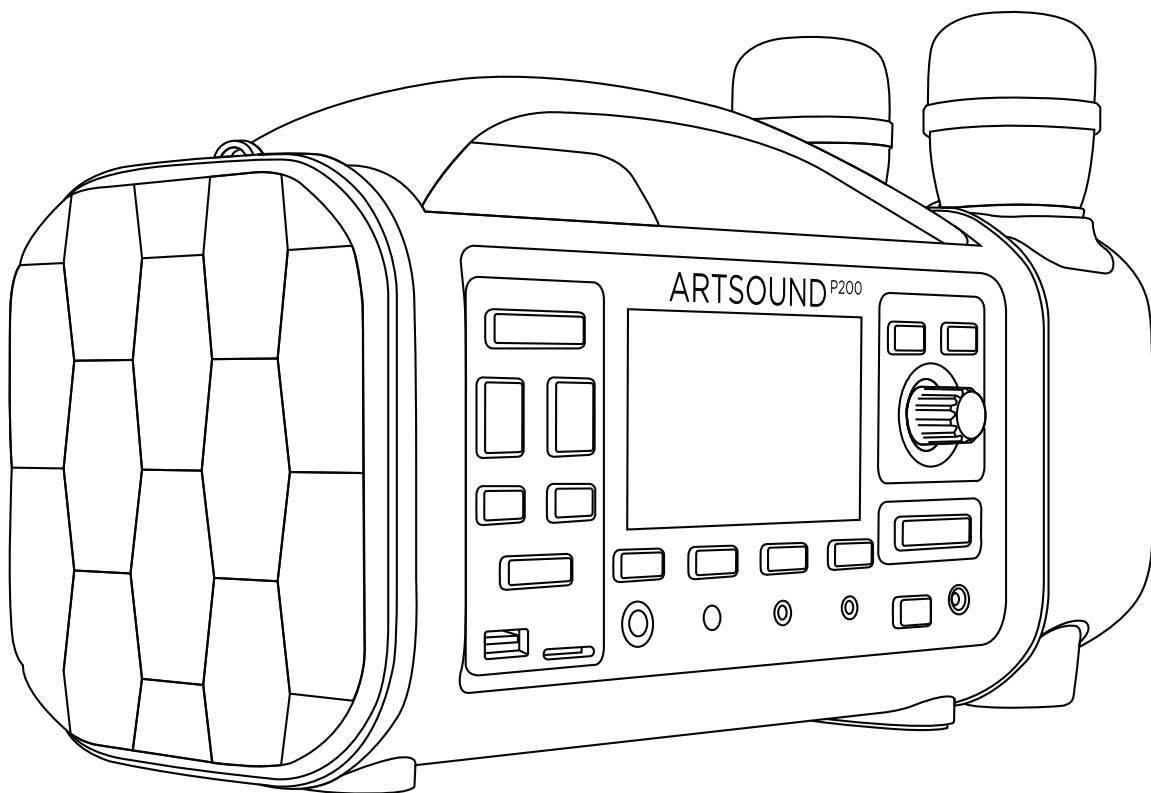


## Index

Introduction	01
Trademark Notice	01
Key Product Features	02
IMPORTANT SAFETY INSTRUCTIONS	03
General Heed and Warnings	03-04
CE Statement	04
Battery Information	04
Unpacking	05
Part Names & Functions	06-07
Getting Started	
Install P200 PRO Battery	08
Install M20 Battery	08
Connect P200 PRO Charger	09
Connect M20 Charger	09
Pair the Microphones	10
Pair the Bluetooth	11
Control Panel & Information Display	12-13
[DC Charging Port]	14
[Power] Button	14
[Analog Line-Out]	14
[Analog Line-In]	14
[Microphone Pairing Window]	15
[Microphone Input]	16
[MicroSD Card Slot]	16
[USB-A Port]	16
[USB] Button	17
[NEXT] Button	18
[PREV] Button	19
[REC] Button	20
[STOP] Button	21
[Play/Pause] Button	22
[FX] Button	23
[MENU] Button	24
[Navigation Rotary Dial]	25
[ALARM/SOUND] Button	26
[BT] Button	27
[AUX] Button	28
[MIC 1/2] Button	29
Information Display	
Main Menu	30
Main Menu Feature	31
Music Player Menu	32
Settings Menu	33
Settings Menu Item List	34
Battery Level Display	35
Bluetooth Status indication	36
Music Player Menu	37
Settings Menu	38
Changing the Device Language	39
RF Receiver Region	40
Bluetooth Pairing	41
Wireless MIC Channel & Frequency	42
Automatic Channel Selection & Microphone Pairing Process	43
Manual Channel Selection & Microphone Pairing Process	44
Microphone/Input Voice Enhancer-FX Button	45
Technical Specifications - P200 PRO	46
Technical Specifications - M20 Microphone	47
Service & Clearing	47
P200 PRO Size & Dimensions	48
M20 Size & Dimensions	49
Packaging Size & Dimensions	50

ARTSOUND is proud to introduce the P200 PRO Personal Broadcasting System. This portable amplifier (PA) is a professional personal loudspeaker system with a built-in multi-functional media player, 5 independent audio source mixer and enough power to reach an audience up to 100 people. The PA incorporates a Dual Core 1.0 GHz CPU system and its high-definition, outdoor readable, full-color display, allows you to control and manage your broadcasting experience. The feature rich full-color information display is accompanied by dual (2) true-diversity UHF microphone receivers, Bluetooth, analog microphone input, auxiliary audio inputs, as well as a line-output connection. You can connect your media via both USB or MicroSD simultaneously. The high-bitrate media player can also record your broadcasting sessions directly to MP3 format. With a quick-exchangeable, removable battery pack, ensures you'll have enough autonomous time throughout the day. The integrated Microphone Stand Mount allows you to raise your sound to make the most impact to your audience.

Every ARTSOUND P-Series products incorporate true-diversity wireless technology. Each UHF Receiver is accompanied by 2 independent RF receivers (4 antennas in total). This ensures the wireless link between each of the 2 microphones stays stably connected to the PA system. You will be able to monitor the reception strength and battery level of the companion M20 Microphones.

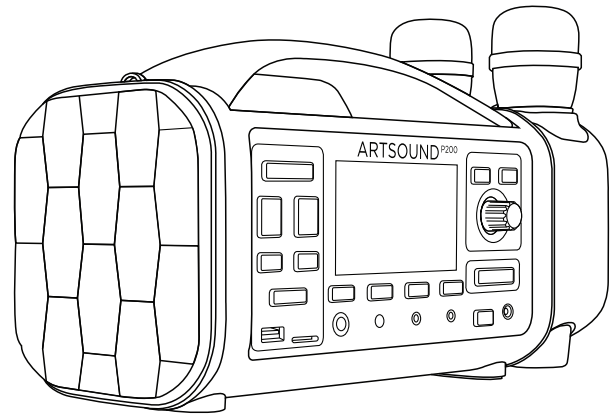

Thank you for choosing ARTSOUND!

To ensure proper operation, please carefully read this owner's manual and safety instruction before using the product. After reading this manual, be sure to keep it for future reference.

Should you have any questions about your new device please contact support at:  
<https://www.artsound.com.cn/support>

#### Trademark Notice



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by ARTSOUND is under license.

## ARTSOUND

The ARTSOUND® word mark and logos are registered trademarks owned by Artsound International Development Co., Limited.

All rights reserved

**Key Product Features**

Suitable for Audiences up to (100) people



Dual (2) Channel, True-Diversity Antenna Technology



50W Class-D Professional Audio Amplifier



Two (2) M20 Egonomic Aluminum UHF Microphones



Integraded Audio/Visual, Media Player



Record Live Sessions Directly to MP3



Exchangable Battery with 16hrs Extended Playtime



 
Programmable Siren/Alarm/Alert Sound Effects Button



Adjustable Voice Reverberation Enhancer



1/4" Analog Microphone Input



3.5mm Auxilary Input & Output



Bluetooth 5.3 Streaming Audio



USB 2.0 Removable Media Port




MicroSD Removable Media Port



5/8" Integrated Tripod Stand Adapter  
\*\*Tripod Sold Seperately

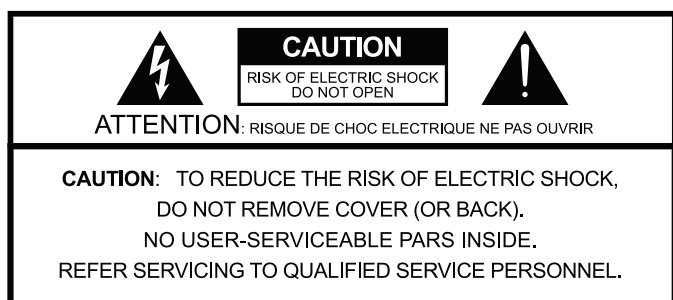

**IMPORTANT SAFETY INSTRUCTIONS**

This symbol alerts the user to the presence of recommendations about the product's use and maintenance.



The lighting flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated, dangerous voltage within the product enclosure that may be of magnitude to constitute a risk of electrical shock.



**WARNING!** This product contains magnetic material. Contact your physician if you have questions on whether this might affect the operation of your implantable medical device



This symbol Indicates safe use in non-tropical climatic conditions.



For indoor use only  
This electrical equipment is designed primarily for indoor use.



**WEEE**  
Please dispose of this product at the end of its operational lifetime by bringing it to your local collection point or recycling center for such equipment.

- **WARNING:** Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery, etc.)

**General heed and warnings**

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- Clean the product only with a soft and dry fabric. Never use liquid cleaning products, as this may damage the products cosmetic surfaces.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.

- Avoid placing the product in a location under direct sunlight or near any appliance that generates UV (Ultra Violet) light, as this may change the product surface finishing and cause a change in color.
- Audio vibrations created by the product may cause other objects to move, ensure that loose objects are not at risk of falling onto the product or persons and cause personal or object damage.
- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- For PLUGGABLE EQUIPMENT, the Mains power outlet shall be installed near the equipment and shall be easily accessible.
- Please see the bottom of the product for nameplate and electrical rating.
- **CAUTION:** The instructions under Service section are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- The maximum ambient operating temperature is 40°C
- The plug of the power supply is used as the disconnect device, the socket-outlet shall be installed near the equipment and shall be easily accessible.

#### CE Statement

Hereby, Manufacturer (Artsound International Development Co. Ltd), declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

- The plug of the power supply is used as the disconnect device, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- The marking is located on the bottom of the apparatus.
- **CAUTION:** Risk of explosion if the battery is replaced by an incorrect type.
- High or low extreme temperatures that a battery cannot be subjected to during use, storage or transportation and low air pressure at high altitude.
- Replacement of a battery with an incorrect type that can defeat a safeguard.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

#### Battery Information

**CAUTION:** Risk of explosion if the battery is replaced by an incorrect type.

High or low extreme temperatures that a battery cannot be subjected to during use, storage or transportation and low air pressure at high altitude.

Replacement of a battery with an incorrect type that can defeat a safeguard.

Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.




 



Leaving battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

## Unpacking


Each P200 PRO is built to the highest standard and thoroughly inspected before leaving the factory. Upon arrival, carefully inspect the packaging. If you find any damage, immediately notify the retailer or shipping company. Check that the following parts are supplied within the package:

- A. ARTSOUND P200 PRO PA Speaker
- B. P200 Battery Pack
- C. (2) M20 Microphones
- D. (2) 18500 Rechargeable Microphone Batteries
- E. AC/DC 19VDC Battery Charger
- F. AC Socket Adaptor(s)
- G. Quick Start Guide
- H. Safety & Warranty Information
- I. Shoulder Strap

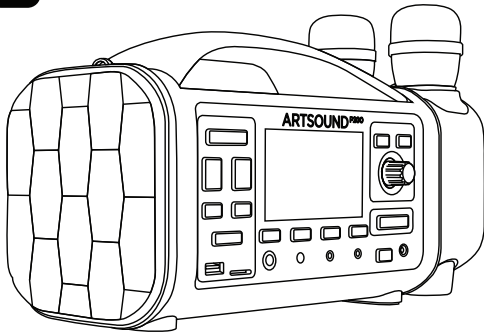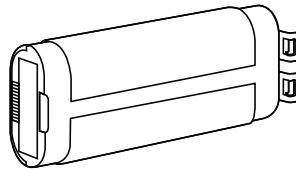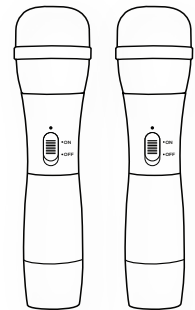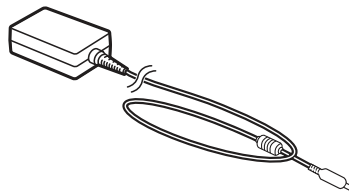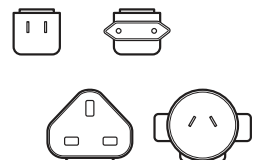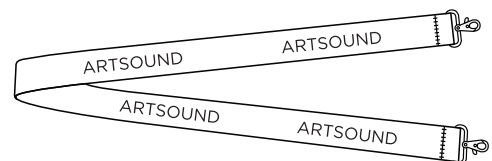
**A****B****C****D****E****F****G****H****I**

## Part Names & Functions


Control Panel

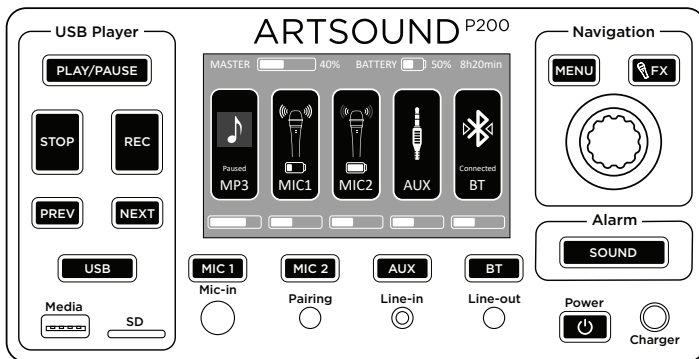


Microphone Holder

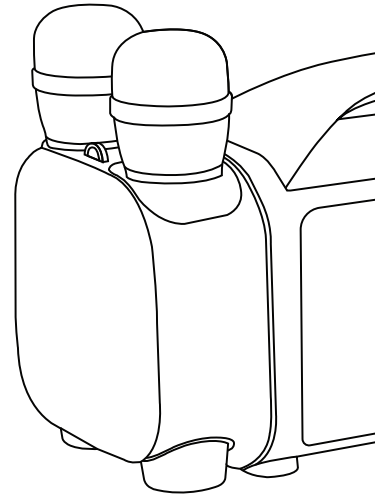

P200 Battery & Cover

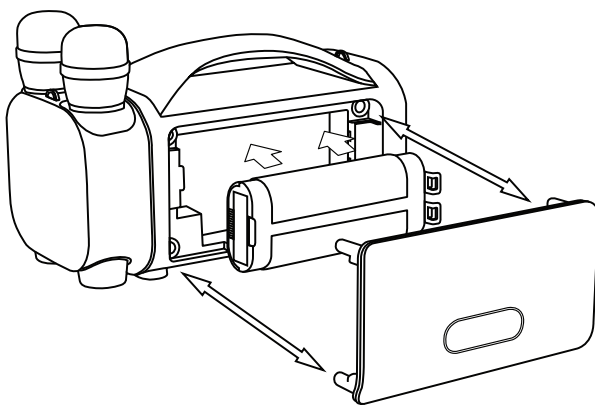


Tripod Mount

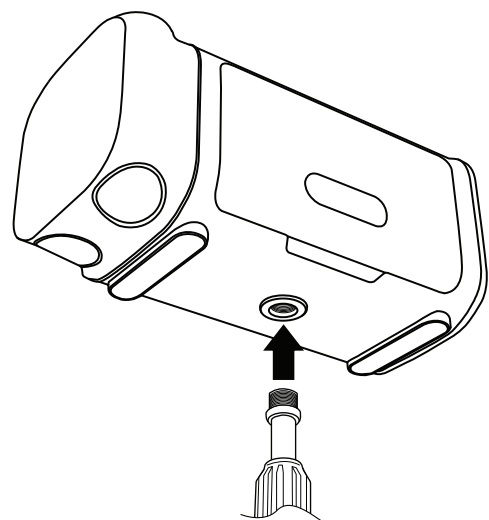


\*\* Tripod sold separately

## Part Names & Functions


Firmware Update Port

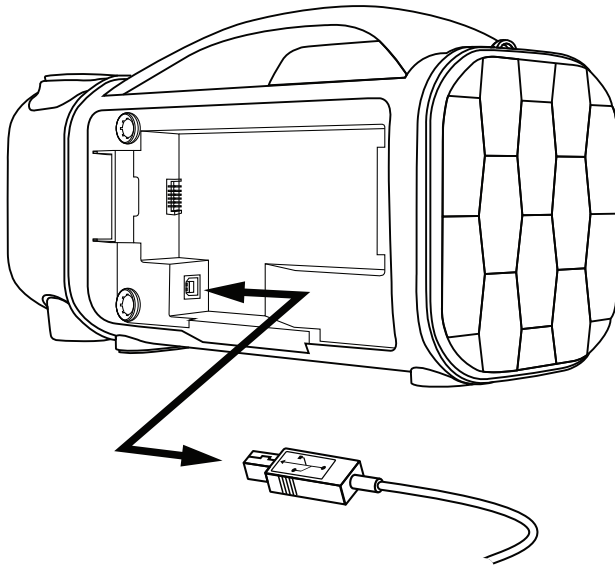


Microphone Battery

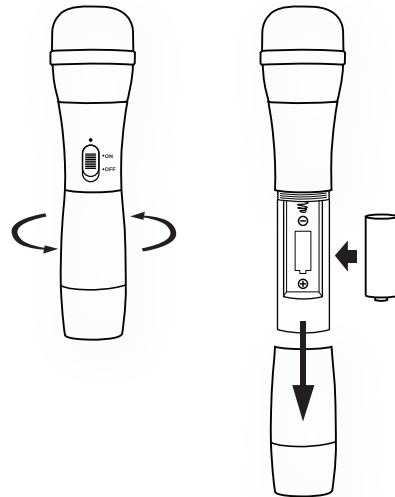

Shoulder Strap Clip/Mounts

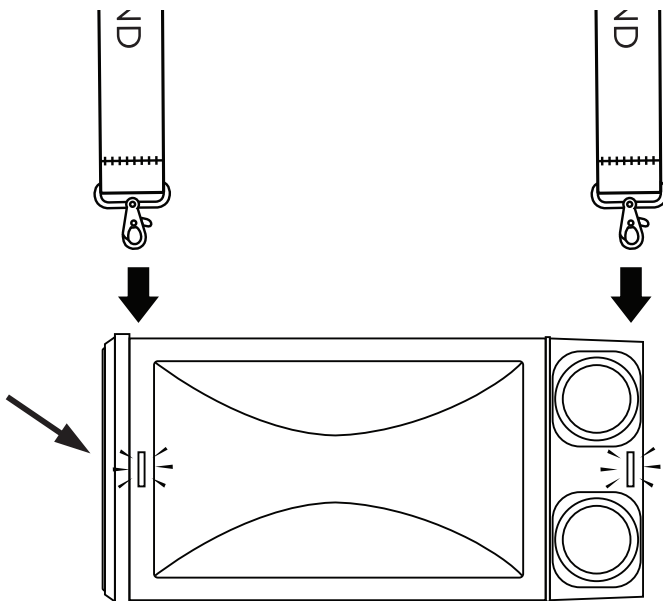


Microphone Pairing Window

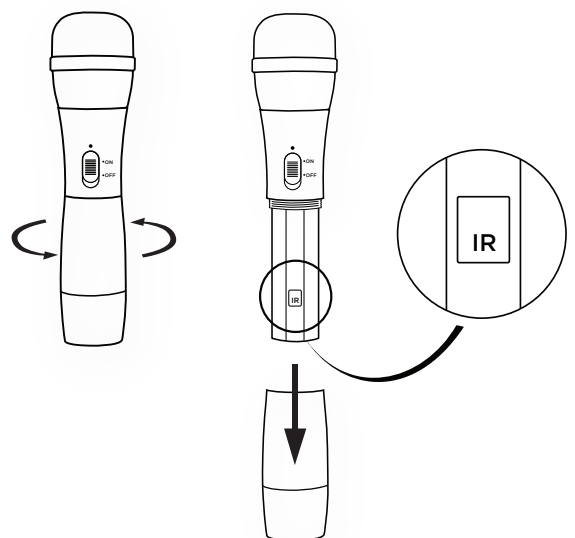


## Getting Started

### 1. Install P200 PRO Battery

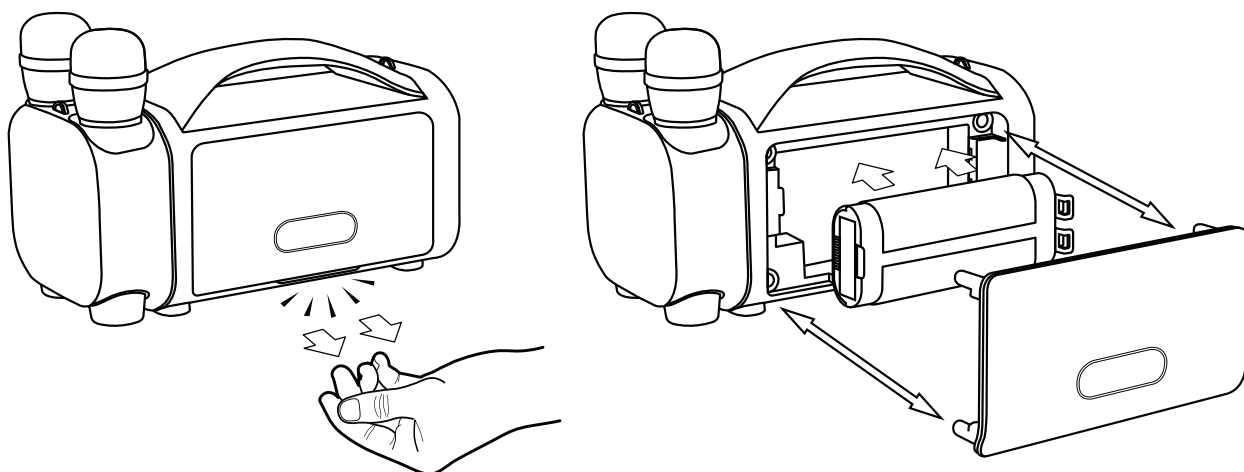


### 2. Install M20 Battery

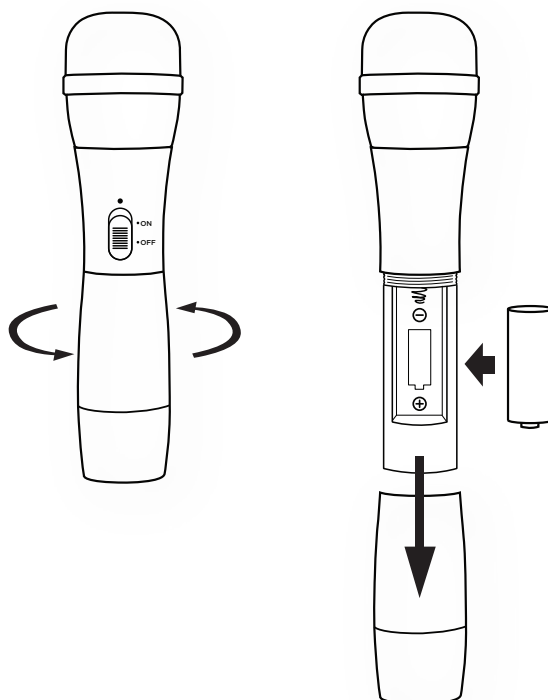


## Getting Started

### 3. Connect P200 PRO Charger

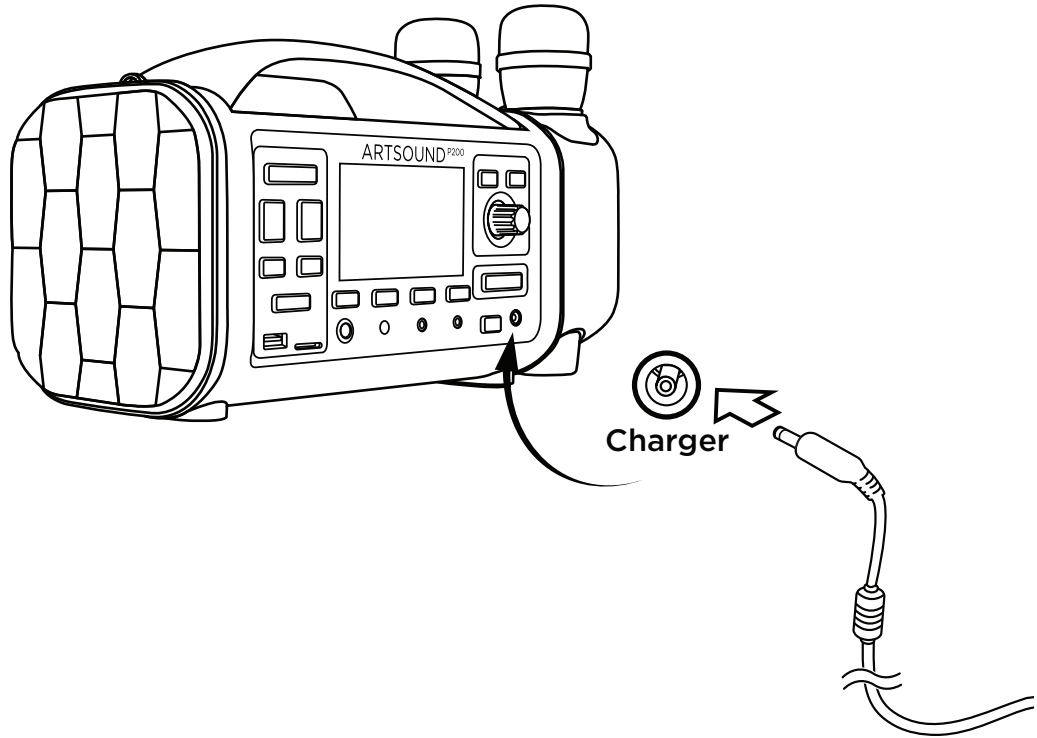

### 4. Connect M20 Charger

Turn power off

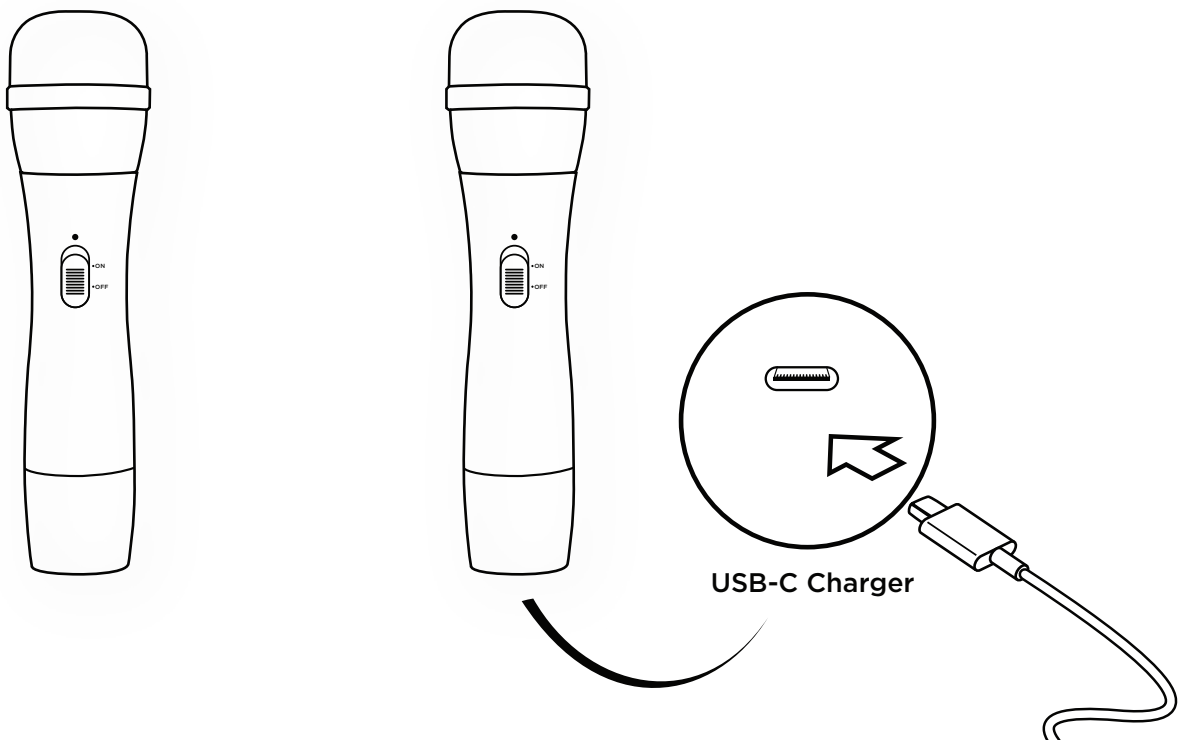


## Getting Started

### 5. Pair the Microphones


#### Step 1

Turn Mic power on

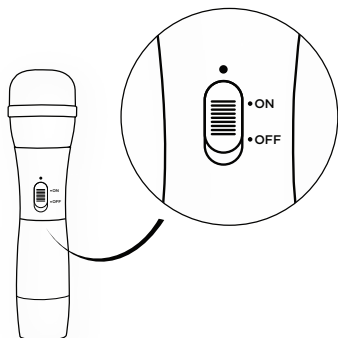


#### Step 2

Remove battery cover

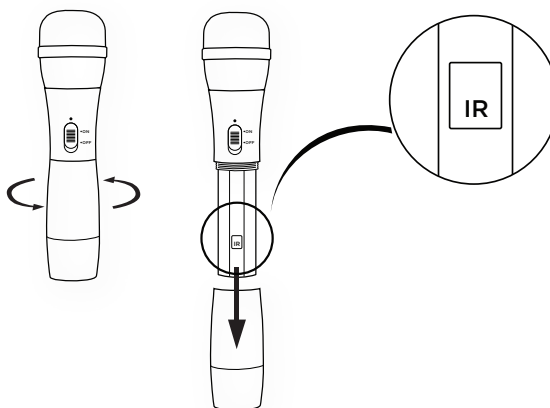

#### Step 3

Press MENU button

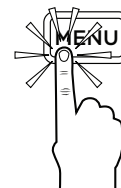

#### Step 4

<Select "Auto"> for the desired MIC# Channel

MASTER <div><div></div></div> 40% BATTERY <div><div></div></div> 50% 8h20min	
SETTINGS	Settings
	Language English
	RF Region Mainland China
	Bluetooth Connected
	MIC1 Channel <b>Auto</b>
	MIC1 Start Pairing Connected (CH1)
	MIC2 Channel CH2 (656.675MHZ)
	MIC2 Start Pairing Disconnected
	Alarm Sound Emergency Siren
	Display Brightness FULL
	Key Brightness FULL
	Hardware Version Rev x.x
	Firmware Version XXXX


#### Step 5

<Select "Radio Search"> to Start MIC# Pairing

MASTER <div><div></div></div> 40% BATTERY <div><div></div></div> 50% 8h20min	
SETTINGS	Settings
	Language English
	RF Region Mainland China
	Bluetooth Connected
	MIC1 Channel CH1 (655.200MHZ)
	MIC1 Start Pairing <b>Radio Search</b>
	MIC2 Channel CH2 (656.675MHZ)
	MIC2 Start Pairing Disconnected
	Alarm Sound Emergency Siren
	Display Brightness FULL
	Key Brightness FULL
	Hardware Version Rev x.x
	Firmware Version XXXX

#### Step 6

Shine the Flashing Pairing Light onto the Microphone IR Window

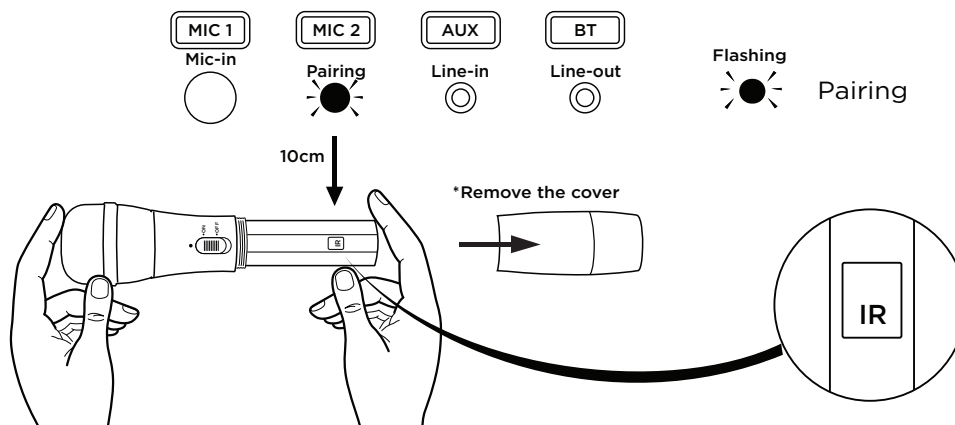




## Getting Started

### 6. Pair the Bluetooth


#### Step 1

Press MENU button

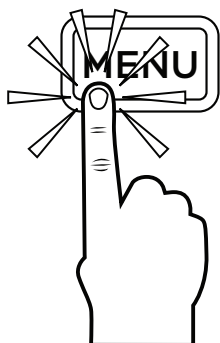


#### Step 2

<Select "Pair"> in Bluetooth Setting

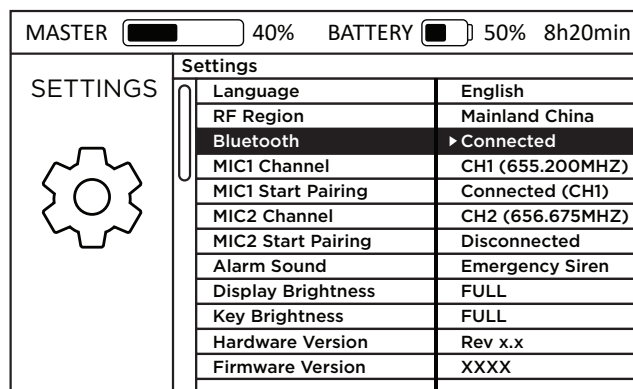


#### Step 3

Pair the Phone to "P200 PRO"

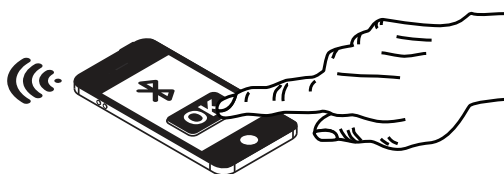


#### Step 4

Adjust the Bluetooth Source, Volume Level

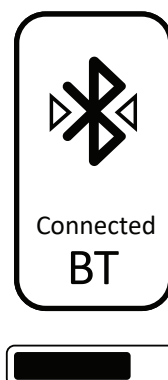

## Control Panel & Information Display

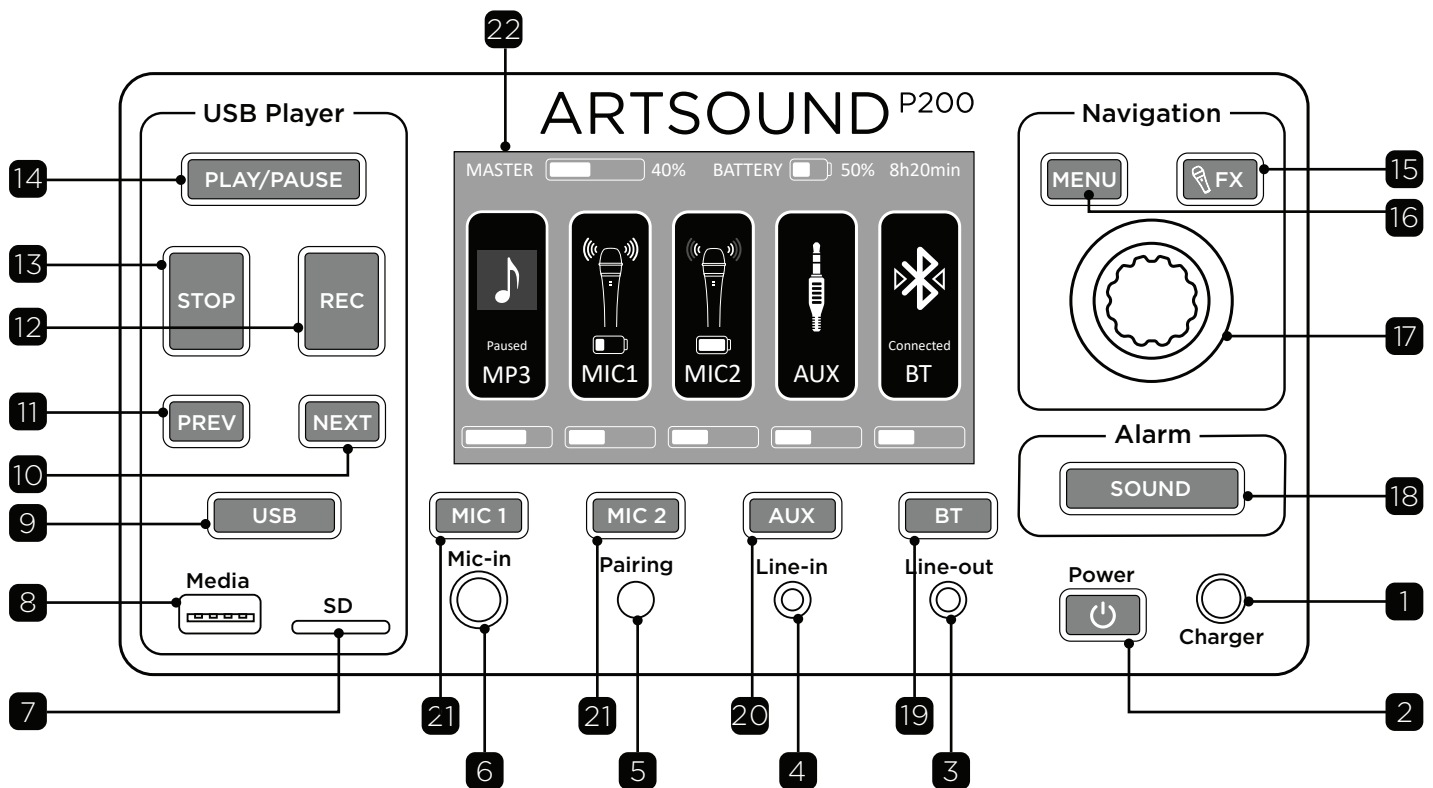

### 1 DC Charging Port

Connect the 19VDC charger here

### 2 Power Button

Press for 2s to **Power On/Off** the Speaker

### 3 Audio 3.5mm Line-Out Port

Provided unbalanced singled-ended audio output to an external companion amplifier

### 4 Audio 3.5mm Line-In Port

Provides unbalanced, single-ended, mono analog input from an external audio source

### 5 Microphone Pairing Window

During the Wireless Microphone Pairing Process, point this Blinking Light to the IR receiver Window on the M20 Companion Wireless Microphone

### 6 1/4 Microphone Port

Connect your wired microphone here.  
This Port Volume Control is controlled by AUX Volume Level

### 7 MicroSD Card Slot

Install SD Card Flash with FAT16/32 or NTFS files system for MP3 Player Record and Playback

### 8 USB-A Media Port

Install Removable USB Flash with FAT16/32 or NTFS files system for MP3 Player Record and Playback

### 9 [USB] Media Player Source Button

When pressed, this will toggle between the **Main Menu** and the **Media Player** pages. To edit the **Media Player, Source Volume Level**; long press this button for 3sec

### 10 NEXT Button

When Pressed, this will go to the **Next Track** in the playlist  
Long Pressing this button will toggle between the **Track or Playlist** Loop Setting

### 11 PREV Button

When Pressed, this will go to the Previous Track in the playlist  
Long Pressing this button will return the cursor to the beginning of the playlist

### 12 REC Button

When Pressed, this will start a new MP3 Recording as long as a removable media is connected to the USB or MicroSD Port and has been properly formatted

## Control Panel & Information Display

### 13 STOP Button

When Pressed, this will stop the MP3 Player Recording or Playback

### 14 PLAY/PAUSE Button

When Pressed this will toggle the MP3 Player Between Play and Pause of a Track

### 15 FX Button

When Pressed, this Toggles Microphone Effects On/Off  
Long Pressing this button enters the **Microphone Effects Menu**

### 16 MENU Button

When Pressed this Toggles between the **Main Menu** and **Settings Menu**

### 17 Navigation Rotary Dial

Rotating the Dial **Scrolls Up/Down** lists is the menu screens  
Pressing the Dial **Selects/Exits** menus

### 18 ALARM/SOUND Button

While Pressed, the selected **Alarm Sound** will play

### 19 Bluetooth Source Button

When Pressed, this toggles the MUTE of the Bluetooth Source  
Long Pressing this button enters **Bluetooth Source Level Editing** for 3sec.

### 20 AUX Input Button

When Pressed, this toggles the MUTE of the Auxiliary Source  
Long Pressing this button enters **Auxiliary Source, Volume Level Editing** for 3sec.


### 21 MIC 1 & MIC 2 Source Button

When pressed, this toggles the MUTE of the Wireless Microphone # Source  
Long Pressing this button enters **Wireless Microphone, Source Volume Level Editing** for 3sec.

### 22 High-Definition, Full-Color Information Display

The 4" Full-Color Display provides an intuitive interface between the user and the many audio features of the P200 PRO


### 1 DC Charging Port

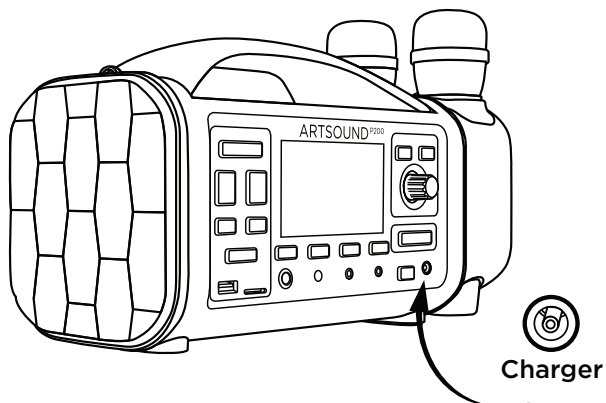

#### Port Function

- Connect 19VDC 45-Watt power supply for charging the battery
- P200 PRO can also operate from this power input when the battery is removed


### 3 Analog 3.5mm Line-Out Port

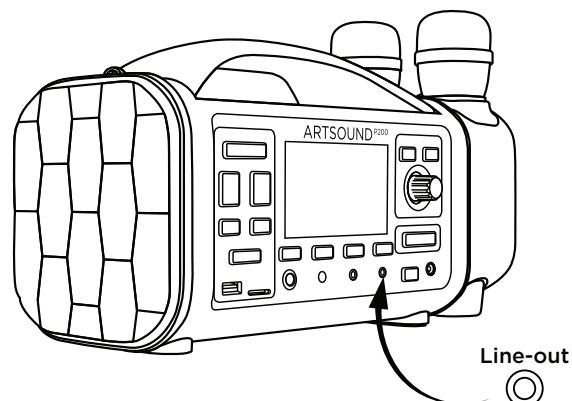

#### Port Function


- Provides unbalance singled-ended audio output from the DSP to connect to an external companion power amplifier

### 2 Power Button

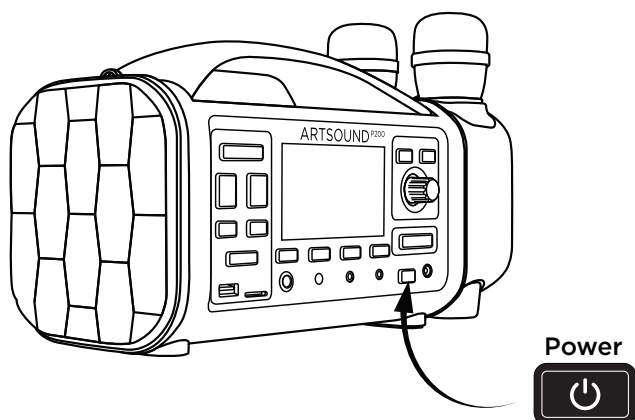


#### Key Function (pressing action)

- Press 2s to power ON/OFF

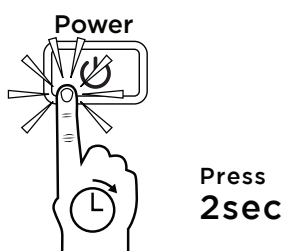

### 4 Analog 3.5mm Line-in Port


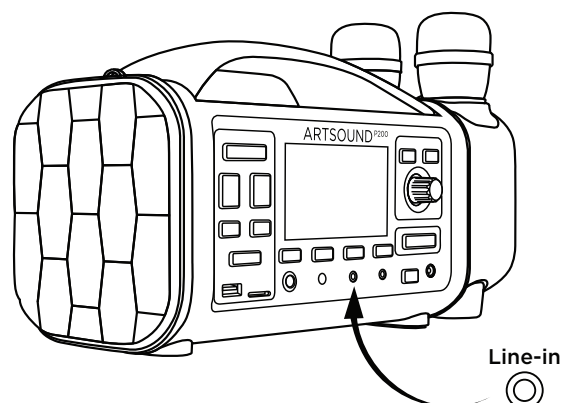



#### Port Function

- Provides unbalance singled-ended audio input to the DSP for connecting external analog audio sources.
- Source is controlled by the **AUX Source Volume Level**
- Source is affected by **FX Effects**


## 5 Microphone Pairing Window

The Microphone Pairing Window is used to send pairing and configuration data from the P200 PRO to the M20 wireless microphone. When initiating the pairing command in the settings menu, point this blinking light at the IR window located on the M20 Microphone under the battery cover. Light signals will transmit the pairing data. Make sure the window is clear from obstruction during the microphone pairing process. Point the microphone IR receiver window at the blinking light within 10cm. Once pairing was successful, you will notice the wireless microphone status displayed on the main menu.

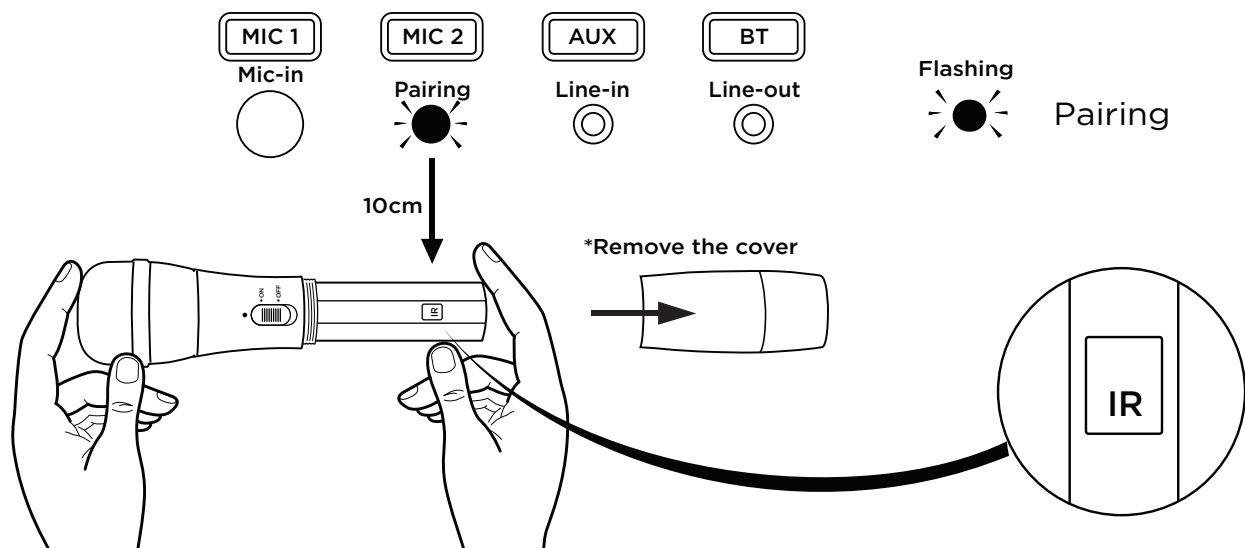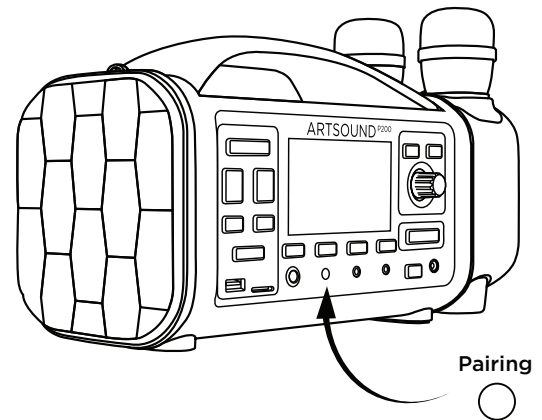


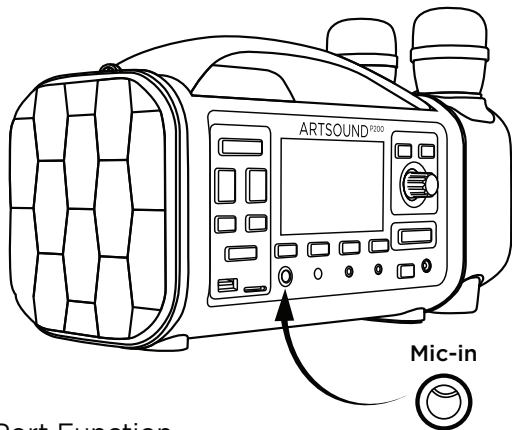**6 External Microphone ¼" Input Port****Port Function**


- Provides unbalance singled-ended audio input from an external wired microphone.
- Source is controlled by the **AUX Source Volume Level**
- Source is affected by **FX Effects**

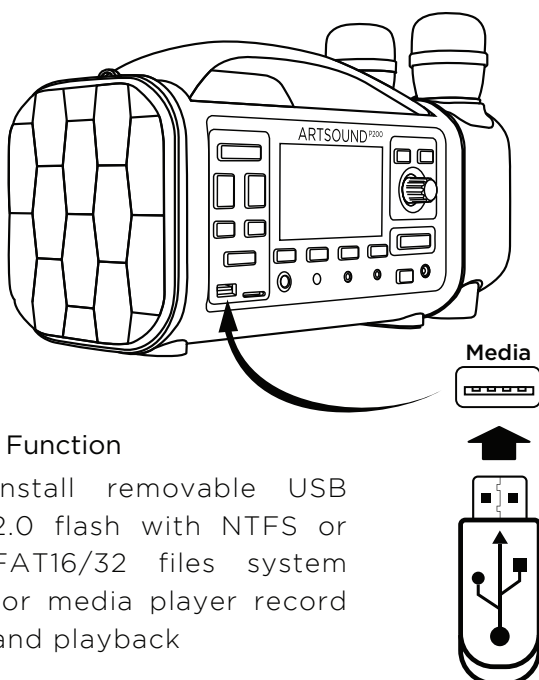**8 USB-A Port****Port Function**

- Install removable USB 2.0 flash with NTFS or FAT16/32 files system for media player record and playback

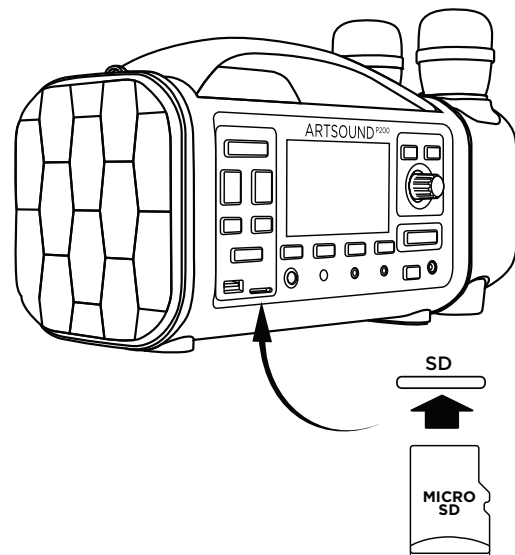**7 MicroSD Card Slot****Port Function**

- Install microSD card flash with NTFS or FAT16/32 files system for media player record and playback.

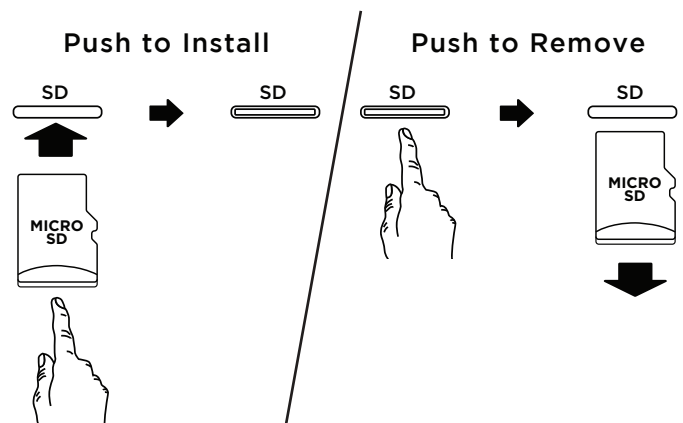

## 9 [USB] Media Player Source Button

By pressing the media player source button you will be taken to the media player screen where you can preview and select tracks in the music player playlist. The volume of this source can be edited / adjusted by long pressing the key until it is flashing. This button does not have a quick mute/unmute function. See the **Media Player Section** for more details. The button has an adjustable backlight brightness that can be controlled globally with other keys.

### Key Function (pressing action)

- Short Press <1s: toggles between **Media Player Screen** and the **Main Menu**
- Long Press >2s: edit **Media Player Volume Level**

### Key Illumination (indicator)

- No Color: **Key Brightness** = OFF
- Blue: **Media Player** is Muted
- White: **Media Player** is Unmuted,
- White Flashing: while editing the **Media Player Volume Level**

### Key Illumination Types

Backlight OFF



White: Media Player ON




Blue: Media Player OFF



White Flash:  
Media Player Volume  
Level Editing




Toggles between Media Player & Main Menu

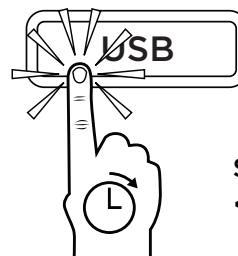

Short press  
<1sec

Edit/Adjust Media Player Volume Level


### Step 1

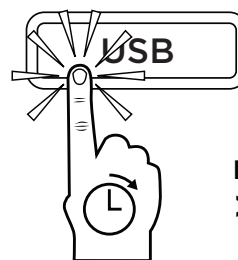


Long press  
>2sec

### Step 2

Adjust Volume Level

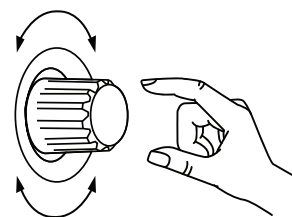

Press to Save

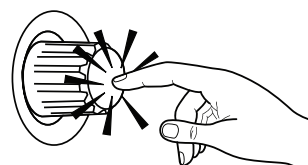

## 10 [NEXT] Next Track Button

While a track is currently being played in the media player, pressing the next [NEXT] track button will cause the media player to go to the next track in the playlist. If the button is continuously held for 2 seconds it will change the playback loop type. It will toggle the player between continuous consecutive playing, looping to the beginning only once it has reached the last track, or to single Track looping feature. Note: that the media player is always in continuous consecutive play mode each time the speaker is powered on. The button has an adjustable backlight brightness that can be controlled globally with other keys.

### Key Function (pressing action)

- Short Press <1s: play the next track in the playlist
- Long Press >2s: toggles the media player looping mode between **Continuous Consecutive Play** and **Single Track Loop**

\*\* Default Mode on Start-up is Continuous Consecutive Play

### Key Illumination (indicator)

- No Color: **Key Backlight** = OFF
- Blue: adjustable **Key Brightness**
- White: while key is pressed

### Key Illumination Types

Backlight OFF




White: Key is Pressed



Blue: Key Backlight




Play the Next Track in the Playlist

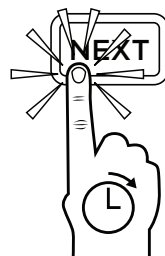


Short press  
<1sec

Toggles the Media Player Looping Mode between Continuous Consecutive Play and Single Track Loop

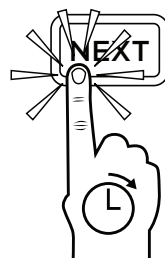


Long press  
>2sec

 Track list play



Single Track Loop

 



11

[PREV] Previous Track Button

While a track is currently being played in the media player, pressing the previous [PREV] track button will cause the media player to return to the previous track in the playlist. If the button is continuously held for 2 seconds it will force the media player to return to the first track in the playlist. The long press is a fast way to restart the player from the beginning again. The button has an adjustable backlight brightness that can be controlled globally with other keys.

Key Function (pressing action)

- Short Press <1s: play the previous track in the playlist
- Long Press >2s: rewinds the media player to track #001

Key Illumination (indicator)

- No Color: **Key Backlight** = OFF
- Blue: adjustable **Key Brightness**
- White: while key is pressed

Key Illumination Types

Backlight OFF

PREV

White: Key is Pressed

PREV

Blue: Key Backlight

PREV

Play the Previous Track in the Playlist



Short press

<1sec

Rewinds the Media Player to Track #001



Long press

>2sec

Track List	001/049
▶ Music Childsoul - Umble Pie.mp3	
Red Eyed Pas - Imma Be Baby.mp3	
Childish Gambling.mp3	
French Tanamon - Wash U Well.mp3	
Future Past ft Micki Najmi.mp3	
Music Childsoul - Umble Pie.mp3	
Childish Gambling.mp3	
Red Eyed Pas - Imma Be Baby.mp3	
Future Past ft Micki Najmi.mp3	
French Tanamon - Wash U Well.mp3	
The Hardwork Song .mp3	
Downtown Funk.mp3	
That's What I Hate.mp3	
Shape Of Your Heart.mp3	

## 12 [REC] Record Button

The record [REC] button is used to start a new MP3 recording of a live broadcasting session. Press the stop button to terminate and save the recording directly to MP3 format. The recording will be saved into the removable flash microSD or USB connected device. The recording feature is disabled if no removable storage devices are connected. Note: the media player can not play a song from the playlist and record at the same time. You can however, record music and microphone input together by using the Bluetooth connection or any of the inputs such as line-in if you wish to record music and the microphone voice at the same time. The button has an adjustable backlight brightness that can be controlled globally with other keys.

### Key Function (pressing action)


- Press: starts an MP3 recording session

### Key Illumination (indicator)


- No Color: **Key Backlight** = OFF
- Blue: MP3 Player is NOT Recording
- Red: MP3 Player is Recording

### Key Illumination Types


Key Backlight OFF

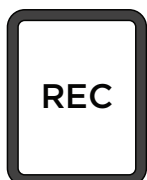


Red: MP3 Recording

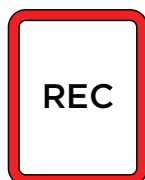

Blue: MP3 NOT Recording

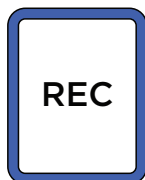

Starts an MP3 Recording Session

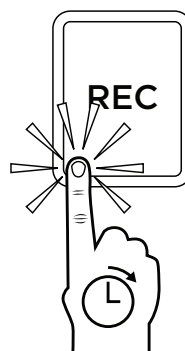

Short press  
<1sec

### 13 [STOP] Stop Button

The stop button will be illuminated white color any time the media player has stopped all tracks and/or stopped recording. Use this button to stop a song that is currently playing or to terminate and save a MP3 live session recording. You can also use the stop button to rewind a single track that is being played to the beginning of the same track again. The default state of the media player is “stopped” status on power up of the device. The button has an adjustable backlight brightness that can be controlled globally with other keys.

#### Key Function (pressing action)


- Press: stops the track that is being played or recorded.

#### Key Illumination (indicator)

- No Color: **Key Backlight** = OFF
- Blue: media player is playing or recording
- White: media player is stopped

#### Key Illumination Types


Key Backlight OFF

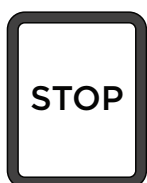


White: Player Stopped



Blue: Playing or Recording

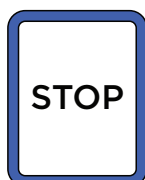

Stops the Track that is being Played or Recorded.

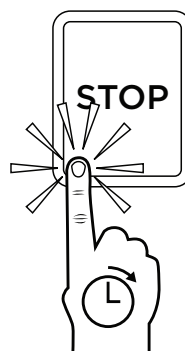

Short press  
<1sec

## 14 [Play/Pause] Button

The play/pause button is used to start or pause a track that is in the media player playlist. There must be removable flash media connected to the USB or microSD card slot in order to start the media player. If no media is available for playback this feature will be disabled. See the **Multi-Media Player Function Section** for more details. The button has an adjustable backlight brightness that can be controlled globally with other keys.


### Key Function (pressing action)

- Press: toggles media player play / pause state


### Key Illumination (indicator)

- No Color: **Key Brightness** = OFF
- Blue: Media Player is not Playing
- White: Media Player is Playing
- White Flash: Media Player is Paused

### Key Illumination Types

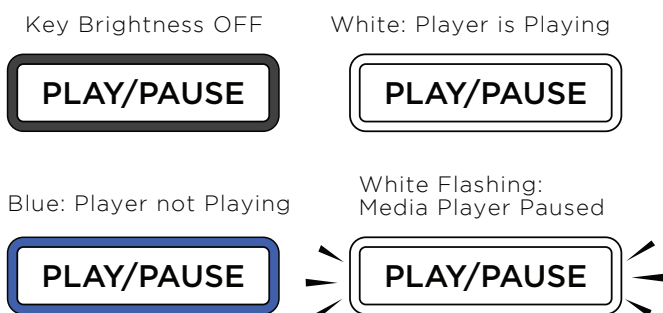

Toggles Media Player Play / Pause State

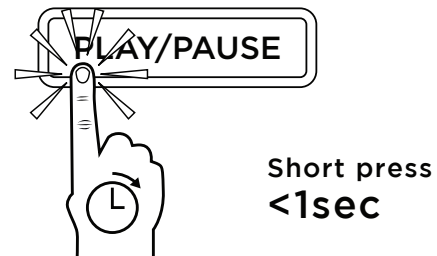

## 15 [FX] Button

The FX button offers a quick way to enable or disable the voice enhancement feature for karaoke sound effects applied to all of the input signals. By short pressing the button you disable or enable the effects. By long pressing the button you will be taken to the karaoke effects adjustment screen where you can adjust the tonality and amplitude of the effect. See the **Microphone/Input Voice Enhancer - FX Effects Section** for more details about the customization of the voice effects. This button has an adjustable backlight brightness that can be controlled globally with other keys. Use this button in conjunction with the menu button when a software reset is required.

### Key Function (pressing action)

- Short Press <1s: Toggle FX Effects ON/OFF
- Long Press >2s: Enter **FX Editing Screen**
- Press both **MENU + FX** buttons together for **Software Reset**

### Key Illumination (indicator)

- No Color: **Key Brightness** = OFF
- Blue: **FX Effects** applied to inputs are **Disabled**
- White: **FX Effects** applied to inputs are **Enabled**
- White Flashing: While in the **FX Editing Screen**

### Key Illumination Types

Key Brightness OFF



White: FX Effect ON




Blue: FX Effect OFF



White Flashing: FX Editing




Toggle the FX Effects ON/OFF

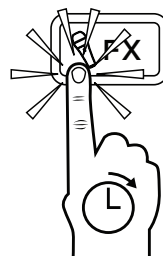


Short press  
<1sec

Enter the FX Editing Screen

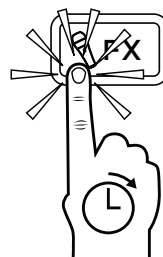


Long press  
>2sec

Software Reset: restart the device

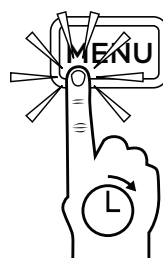

Together

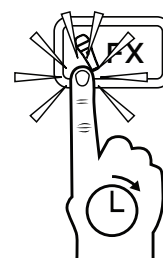

Short press  
<1sec

Short press  
<1sec

## 16 [MENU] Button

The menu button offers a convenient way to switch between the main menu and the settings menu screens. It also allows you to exit other screens such as the karaoke effects editing or the media player screen and return back to the main menu screen. The button has an adjustable backlight brightness that can be controlled globally with other keys. Use this button in conjunction with the FX button when a software reset is required.

### Key Function (pressing action)

- Press: toggles between the **Main Menu** & the **Settings Menu** or return to the main menu when in **Media Player** or **FX** screens
- Press both **MENU + FX** buttons together for **Software Reset**

### Key Illumination (indicator)

- No Color: **Key Brightness** = OFF
- Blue: adjustable **Key Brightness**
- White: while in the settings menu screen

### Key Illumination Types

Key Brightness OFF




White: Settings Menu Screen



Blue: Main Menu Screen




Toggles between the Main Menu & Settings Menu

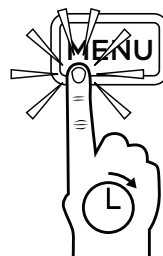


Short press  
<1sec

Software Reset: restart the device

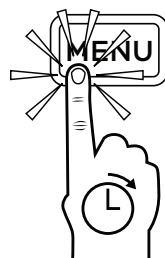

Together

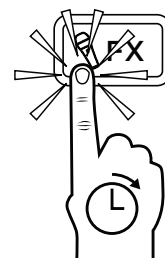

Short press  
<1sec

Short press  
<1sec

## 17 Navigation Rotary Dial

The navigation dial is a 2-axis button that has both rotation and pressing actions. The navigation dial is the main way for the user to interact with menus and settings as well as adjust the master or independent volume sources. Rotating the dial allows for preview of menu or playlist items and the button press selects individual items in lists. The button has an adjustable backlight brightness that can be controlled globally with other keys.

### Dial Function (rotate action)

- Rotate Clockwise: navigates “Down” in menu lists or navigates “Right” in the main menu
- Rotate Counter-clockwise: navigates “Up” in menu lists or navigates “Left” in the main menu

### Key Function (pressing action)

- Press: selects or confirms highlighted menu items

### Key Illumination (indicator)


- No Color: **Key Brightness** = OFF
- Blue: adjustable **Key Brightness**
- White: while dial is pressed
- White Flashing: during editing a highlighted menu item
- Red: Master Volume Muted
- Red Flashing: when action is denied or on system errors / warnings

### Dial Illumination Types


Key Brightness OFF




Blue:  
Adjust Key Brightness

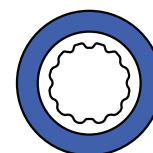

White:  
While Dial Is Pressed

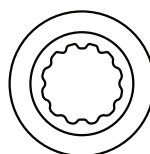


White Flashing:  
Edit Highlighted Items

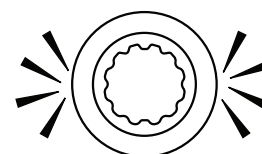


Red: Master mute




Red Flashing:  
Action Denied or Errors

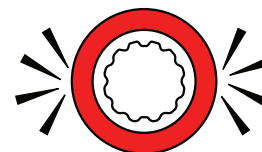

### Rotate to Navigate Menus

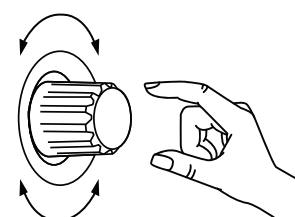

### Press to Select Menu Items

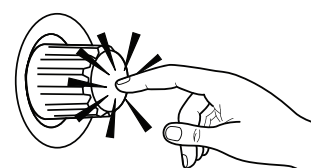

## 18 [SOUND] Alarm/Sound Button

This button will play the preselected siren/alarm announcements while the button is being held. This allows the user to demand the audiences attention. See the **Alarm Sound Effect** Settings Menu Item for a list of alarm/siren effects available for this button. The Volume of the Siren/Alarm effect is controlled by the master volume level. The button has an adjustable backlight brightness that can be controlled globally with other keys.

### Function (key press)

- Press: plays the preselected **Alarm Sound** while this button is pressed

### Key Illumination (indicator)

- No Color: **Key Brightness** = OFF
- Blue: adjustable **Key Brightness**
- Red: while key is pressed
- Red Flashing: when editing **Alarm Sound** in the **Settings Menu**

### Key Illumination Types

Key Brightness OFF




Red: Key is Pressed



Blue: Adjustable Key Brightness    Red Flashing: Editing Alarm



Plays the Preselected Siren/Alarm Sound

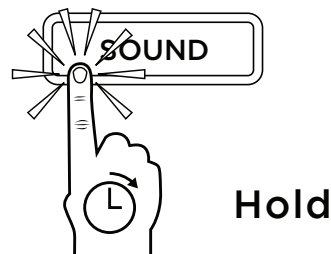



## 19 [BT] Bluetooth Source Button

This button allows the user to quickly mute (Disable) or unmute (Enable) the Bluetooth source. When the key is illuminated white color, this indicates that the Bluetooth source is unmuted in the mixer. If the key is blue color than the source is muted in the mixer. The volume of this source can be edited and adjusted by long pressing the key until it is flashing. Then you will be able to adjust the Bluetooth source volume level. The button has an adjustable backlight brightness that can be controlled globally with other keys.

### Key Function (pressing action)

- Short Press <1s: toggles between mute & unmute
- Long Press >2s: edit **Bluetooth Source Volume Level**

### Key Illumination (indicator)

- No Color: **Key Brightness** = OFF
- Blue: **Bluetooth Source** is Muted
- White: **Bluetooth Source** is Unmuted
- White Flashing: while editing the **Bluetooth Source Volume Level** or while Bluetooth is pairing

### Key Illumination Types

Key Brightness OFF



White:  
Bluetooth Source ON




Blue:  
Bluetooth Source OFF



White Flashing:  
Bluetooth Volume Level  
Editing or Pairing




Toggles Bluetooth Source between Mute & Unmute

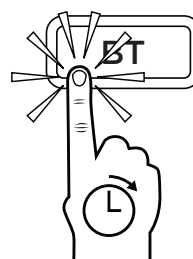


Short press  
<1sec

Edit/Adjust Bluetooth Source Volume Level

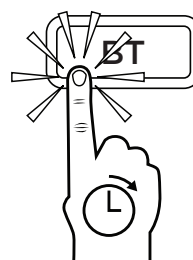


Long press  
>2sec

Adjust Volume Level

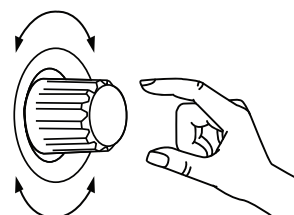

Press to Save

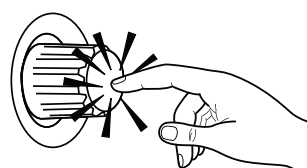

## 20 [AUX] Auxiliary Input Source Button

This button allows the user to quickly mute (Disable) or unmute (Enable) the 1/4" microphone or auxiliary 3.5mm line-in source. When the key is illuminated white color, this indicates that the AUX input source is unmuted in the mixer. If the key is blue color than the source is muted. The volume of this source can be edited / adjusted by long pressing the key until it is flashing. Then you will be able to adjust the auxiliary source volume setting. The button has an adjustable backlight brightness that can be controlled globally with other keys.

### Key Function (pressing action)

- Short Press <1s: toggles between mute & unmute
- Long Press >2s: edit **AUX Source Volume Level**

### Key Illumination (indicator)

- No Color: **Key Brightness** = OFF
- Blue: **AUX Source** is Muted
- White: **AUX Source** is Unmuted
- White Flashing: while editing the **AUX Source Volume Level**

### Key Illumination Types

Key Brightness OFF



White: AUX Source ON




Blue: AUX Source OFF



White Flashing:  
AUX Source Volume  
Level Editing




Toggles AUX Source between Mute & Unmute

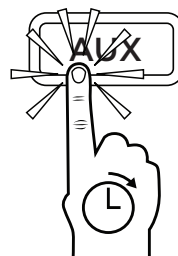


Short press  
<1sec

Edit/Adjust AUX Source Volume Level

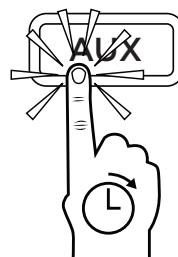


Long press  
>2sec

Adjust Volume Level

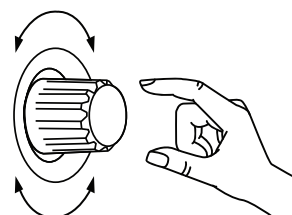

Press to Save

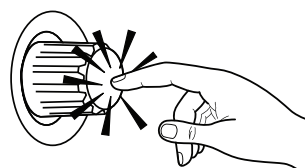

## 21 [MIC1 / MIC2] Wireless Microphone Source Button

The MIC1 and MIC2 buttons allow the user to quickly mute (Disable) or unmute (Enable) the build-in wireless microphone receivers. When the key is illuminated white color, this indicates that the wireless microphone source is unmuted in the mixer. If the key is blue color then the wireless microphone source is muted. The volume of this source can be edited / adjusted by long pressing the key until it is flashing. Then you will be able to adjust the MIC1 or MIC2 source volume level. Additionally when the MIC1 or MIC2 source becomes muted (disabled) the UHF radio for the affected microphone radio receiver will become shutdown and put into standby mode. This helps the speaker to save power when either 1 or 2 of the wireless microphones are not in use. Turning off MIC1 and/or MIC2 when not using them, will significantly increase the music playing time. The button has an adjustable backlight brightness that can be controlled globally with other keys.

### Key Function (pressing action)

- Short Press <1s: toggles between mute & unmute
- Long Press >2s: edit **MIC UHF Receiver Volume Level**

### Key Illumination (indicator)

- No Color: **Key Brightness** = OFF
- Blue: Wireless **MIC UHF Receiver** is Muted, and the UHF Radio CH# is in Standby
- White: Wireless **MIC UHF Receiver** is Unmuted, and the UHF Radio CH# is ON
- White Flashing: while editing the **MIC UHF Receiver Volume Level** or MIC is Pairing

### Key Illumination Types

Key Brightness OFF



White:  
MIC# Receiver ON




Blue:  
MIC# Receiver OFF



White Flashing:  
MIC# Receiver Volume  
Level Editing or Pairing




### Toggles MIC# Source between Mute & Unmute

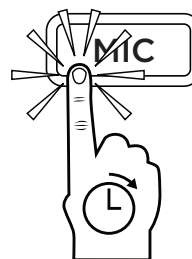


Short press  
<1sec

### Edit/Adjust MIC# UHF Receiver Volume Level

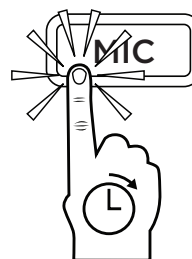


Long press  
>2sec

### Adjust Volume Level

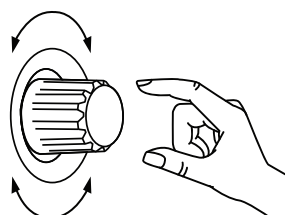


### Press to Save

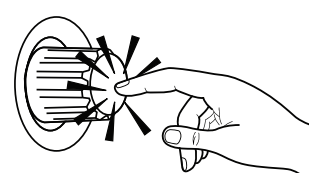

## Information Display - Main Menu

### 22 4" Full Color LCD Display

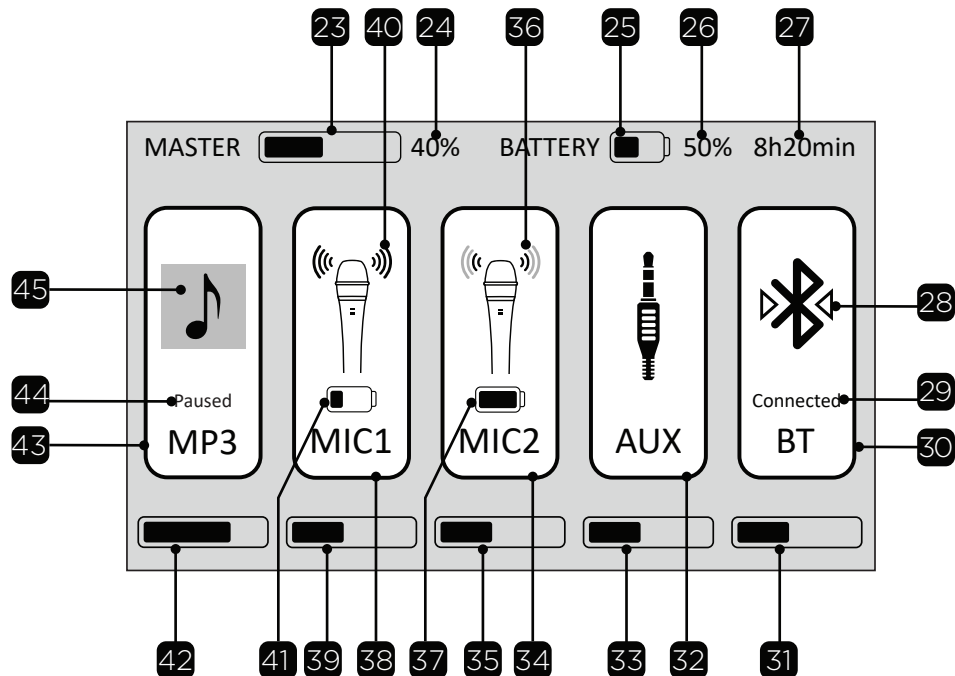

#### 23 Master Volume

- Icon colors: Blue or White
- Blue: Master Volume is not selected for editing
- White: Master Volume is selected for editing and the level can be adjusted using the navigation rotary dial
- See Volume Level Indication

#### 24 Master Volume Level %

- Icon colors: White
- Always display the Master Amplifier gain in (%) format

#### 25 Battery Level Icon

- Icon colors: Green / Orange / Red
- Graphically displays the battery level
- See Battery Level Indication

#### 26 Battery Level %

- Icon colors: White
- Always display the Battery Level in (%) format

#### 27 Battery State Message

- Icon colors: White / Red
- Provides estimate remaining battery time
- Provides error & battery status messages
- See Battery Time Remaining

#### 28 Bluetooth State Icon

- Icons: 3-States
- Icon updates depending on the Bluetooth status
- See Bluetooth State Indication

#### 29 Bluetooth Status Message

- Icon colors: Green / Blue / Red
- Green: Bluetooth connection is active
- Blue: while in pairing process
- Red: Bluetooth Disconnected
- See Bluetooth Status Message

#### 30 Mixer Source - Bluetooth

- Icon colors: Blue / White
- Blue: Bluetooth source is not selected for editing
- White: Bluetooth source is selected for editing and the level can be adjusted using the navigation rotary dial
- See Volume Level indication

#### 31 Mixer Volume - Bluetooth

- Icon colors: Blue / White / Red
- Displays the Bluetooth source mixer volume setting
- Blue: Bluetooth source is not selected for editing
- White: Bluetooth source is selected for editing and the level can be adjusted using the navigation rotary dial
- Red: Bluetooth source is Muted
- See Volume Level Indication

#### 32 Mixer Source - Aux

- Icon colors: Blue / White
- Blue: Auxiliary source are not selected for editing
- White: Auxiliary source are selected for editing and the level can be adjusted using the navigation rotary dial
- See Volume Level indication

#### 33 Mixer Volume - Aux

- Icon colors: Blue / White / Red
- Displays the Auxiliary source's mixer volume setting
- Blue: Auxiliary source's is not selected for editing
- White: Auxiliary source's is selected for editing and the level can be adjusted using the navigation rotary dial
- Red: Auxiliary source is Muted
- See Volume Level Indication

## Information Display - Features

### 34 Mixer Source - Wireless MIC 2

Icon colors: Blue / White

- Blue: Wireless MIC 2 source is not selected for editing
- White: Wireless MIC 2 source is selected for editing and the level can be adjusted using the navigation rotary dial
- See Volume Level indication

### 35 Mixer Volume - Wireless MIC 2

Icon colors: Blue / White / Red

- Displays the Wireless MIC 2 source mixer volume setting
- Blue: Wireless MIC 2 source is not selected for editing
- White: Wireless MIC 2 source is selected for editing and the level can be adjusted using the navigation rotary dial
- Red: Wireless MIC 2 source is Muted
- See Volume Level Indication

### 36 Wireless MIC 2 - RSSI Signal Level

Icon status - 5 levels

- Displays the Wireless MIC 2, UHF Signal level , in colored bar format
- See Wireless Microphone RSSI Level Indicator

### 37 Wireless MIC 2 - Battery Level

Icon colors: Green / Orange / Red

- Graphically display the MIC 2 battery level
- See Battery Level indication

### 38 Mixer Source - Wireless MIC 1

Icon colors: Blue / White

- Blue: Wireless MIC 1 source is not selected for editing
- White: Wireless MIC 1 source is selected for editing and the level can be adjusted using the navigation rotary dial
- See Volume Level indication

### 39 Mixer Volume - Wireless MIC 1

Icon colors: Blue / White / Red

- Displays the Wireless MIC 1 source mixer volume setting
- Blue: Wireless MIC 1 source is not selected for editing
- White: Wireless MIC 1 source is selected for editing and the level can be adjusted using the navigation rotary dial
- Red: Wireless MIC 1 source is Muted
- See Volume Level Indication

### 40 Wireless MIC 1 - RSSI Signal Level

Icon status - 5 levels

- Displays the Wireless MIC 1, UHF Signal level , in colored bar format
- See Wireless Microphone RSSI Level Indicator

### 41 Wireless MIC 1 - Battery Level

Icon colors: Green / Orange / Red

- Graphically display the MIC 1 battery level
- See Battery Level indication

### 42 Mixer Volume - Media Player

Icon colors: Blue / White / Red

- Displays the Media Player source mixer volume setting
- Blue: Media Player source is not selected for editing
- White: Media Player source is selected for editing and the level can be adjusted using the navigation rotary dial
- Red: Media Player source is Muted
- See Volume Level Indication

### 43 Mixer Source - Media Player

Icon colors: Blue / White

- Blue: Media Player source is not selected for editing
- White: Media Player source is selected for editing and the level can be adjusted using the navigation rotary dial
- See Volume Level indication

### 44 Media Player Status

Icon colors: Green / Red


- Green: while Media Player is playing
- Red: when Media Player is stopped / pause or recording
- See Media Player indication

### 45 MP3 Album Cover (when available)

Icon (Image 200\*200pix)

- Displays the MP3 Album cover when available. Otherwise, it shows a generic icon
- Recordings will display & add the Artsound logo

## Information Display - Music Player Menu

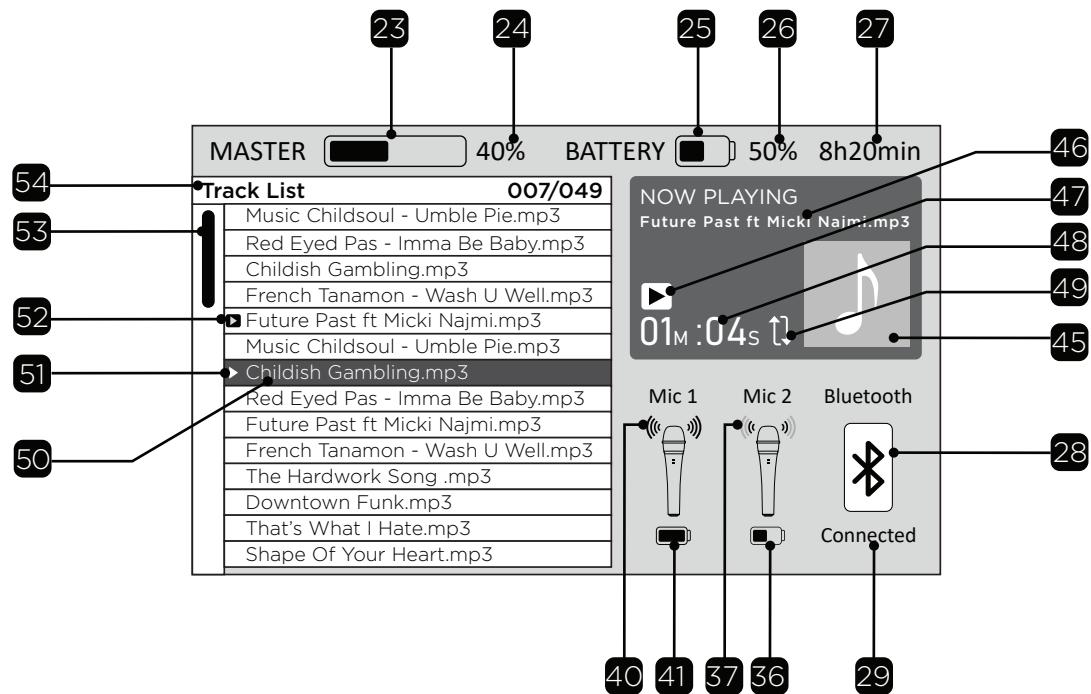

### 46 Player Track Title

- Displays the Current Playing Track Title

### 47 Player State Icon

- Displays the playing state of the Music Player

### 48 Track Timer

- Displays the Current Position in the audio file playback.
- While Playing & Recording this shows the Count Up Time Duration
- Flash Timer When the Track is Paused

### 49 Media Player Looping Mode

- Can select if a single track is repeated automatically or if the next track is played automatically

### 50 Track list Item

- The Menu Item has an alternating gray background to make it easy to see separated lines.
- When selected the colors invert to illustrate a highlighted item in the menu

### 51 Next Track Selection Marker

- Shows the current cursor position in the menu. If the Navigation button is pressed this track will immediately play

### 52 Current Playing Track Marker

- Shows the current state of the track in the playlist


### 53 Playlist Track Scroller

- When music tracks are longer than can be displayed on the screen the Playlist Track scroller assists with navigation.
- The scroller size/scale is based on the total length of the menu items

### 54 Track Index and Total Track Counter

- Left Number shows the Index in the Playlist.
- The index is based on the cursor position (next track selection cursor)
- Right Number displays to total tracks in the album/folder

Information Display - Settings Menu

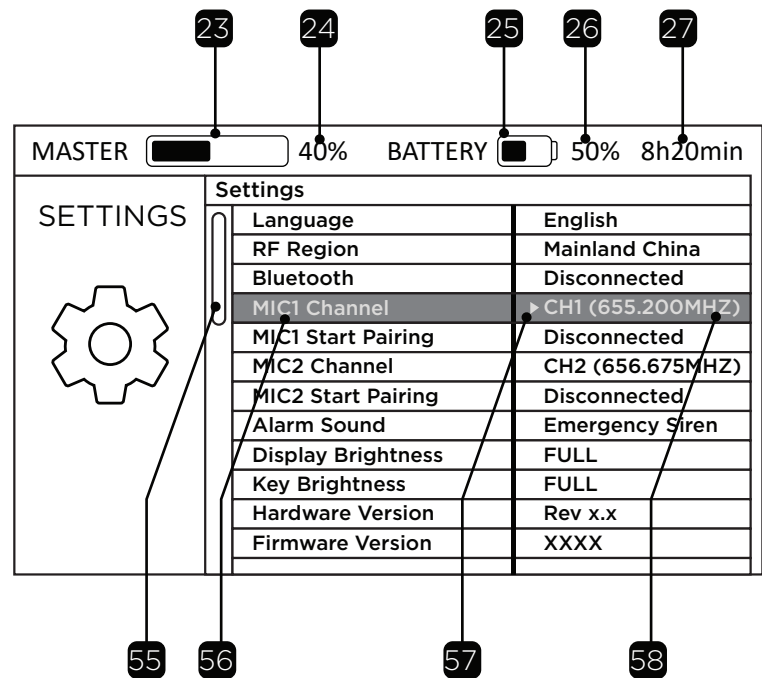

55 Settings Menu Scroller

- When menu items are longer than can be displayed on the screen the menu scroller assists with navigation.
- The scroller size/scale is based on the total length of the menu items

56 Highlighted Items Settings

- The Menu Item has an alternating gray background to make it easy to see separated lines.
- When selected, the colors invert to illustrate a highlighted item in the menu




57 Edit Item Indicator

- If the item can be edited a triangle icon is shown and the user can adjust the selected item
- If the item is static "example: firmware version" then the triangle icon will not display

58 Settings Item

- Displays the Value for the selected item.
- If the item is selected and the item has a range of settings the navigation wheel allows for scrolling through the available items in the list

## Information Display - Settings Menu item list

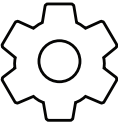MASTER  40% BATTERY  50% 8h20min	
<b>SETTINGS</b>  	<b>Settings</b>
	Language
	English
	RF Region
	Mainland China
	Bluetooth
	Connected
	MIC1 Channel
	CH1 (655.200MHZ)
	MIC1 Start Pairing
	Connected (CH1)
	MIC2 Channel
	CH2 (656.675MHZ)
	MIC2 Start Pairing
	Disconnected
	Alarm Sound
	Emergency Siren
	Display Brightness
	FULL
	Key Brightness
	FULL
	Hardware Version
	Rev x.x
	Firmware Version
	XXXX
	Serial Number
	AABBCCDDEEFF
	Power Consumption
	xx.xx Watts
	Battery Calibration
	Factory Reset

### Language

User can select the Information Display language

- English
- 中文
- Italiano

\*\* Language preview with save on exit

### RF Region

Displays the products UHF receiver territory

\*\*information is read only

### Bluetooth

This is where bluebooth connections can be initiated

1. Pair (pairing new devices)
2. Connect (connect to a previously paired device)
3. Disconnect (remove the previously paired device)

### Wireless Microphone 1 & 2 Channel Selection

Allows for automatic or manual channel selection

1. Choose "AUTO" for Easy Automatic channel searching
2. Alternatively, manually choose the Frequency & channel desired, Channels 1-16
3. Perform the Pairing process to send updated settings to the microphone using the IR pairing process below
4. Frequency displayed in xxx.xxxMhz format

\*\*Settings preview with save on exit

### Wireless Microphone 1 & 2 Start Pairing Process

After Selecting the Desired Channel Frequency from the above menu item. Pair and Synchronize the updated setting to the microphone using the IR pairing process.

1. Perform the Channel Selection Type: Auto or Manual
2. Initiate Pairing with the microphone to configure the microphone with the new setting

\*\*Settings preview with save on exit

### Alarm Sound Effect

User can choose form the 7 different alarms sounds

1. Air Blast 1s
2. Air Blast 2s
3. Air Raid Siren
4. School Bell
5. Emergency Siren
6. Siren Wail
7. Siren Yelp

\*\*Sound preview with save on exit

### Display Brightness

User can choose form the 5 display brightness levels

1. FULL (maximum outdoor brightness)
2. High
3. Medium
4. Low
5. Lowest (10% brightness minimum)

\*\*Brightness preview with save on exit

### Key Brightness

User can choose form the 5 key backlight brightness levels

1. FULL (maximum outdoor brightness)
2. High
3. Medium
4. Low
5. OFF (disables key backlight for maximum power savings)

\*\*Key backlight brightness preview with save on exit

### Hardware Version

Displays the electronic hardware version of the product

\*\*information is read only

### Firmware Version

Displays the products currently installed software version

\*\*information is read only

### Serial Number

Displays the products unique identification number

\*\*information is read only

### Power Consumption

Displays the real-time power consumption in (Watts)

\*\*information is read only

### Battery Calibration

User can initiate the new battery calibration


1. Calibration is completed after 3 charging cycles
2. Use when new battery or different battery is installed
3. This resets the estimated time remaining history

### Factory Reset

Sets the product back to factory initial setting



## Information Display - Battery Level Display

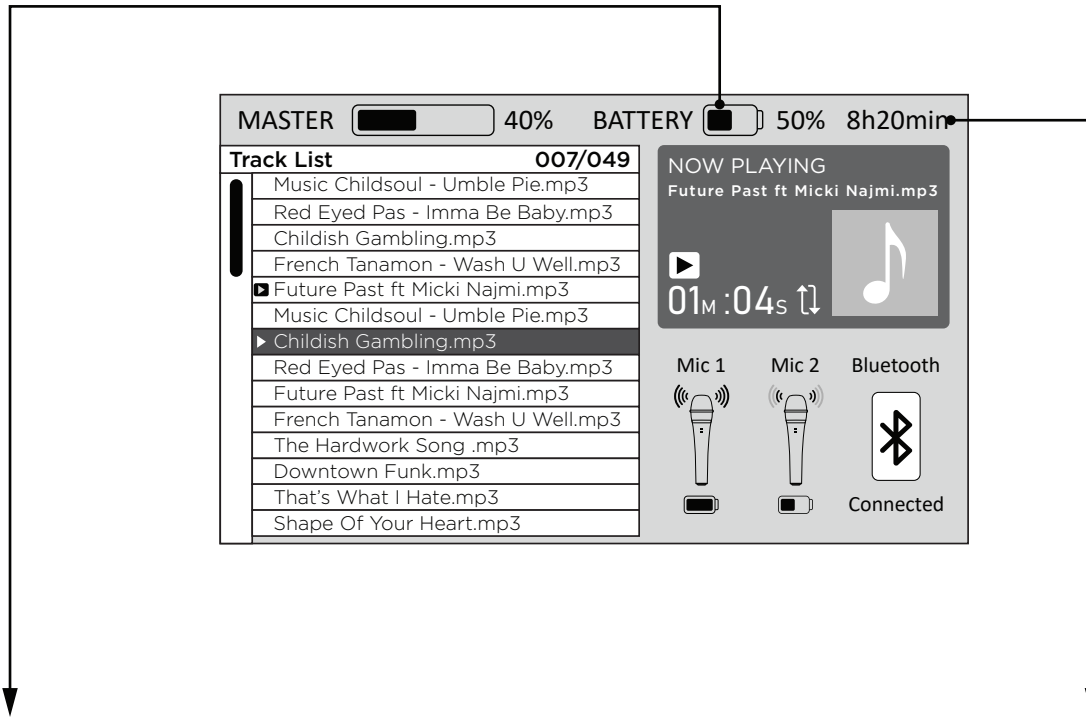

### Battery Charging Icon

- Function
- Anytime the charger is connected, and the battery is not "full" indicate this charging icon
  - Time Remaining Text = "Charging"



### Battery Full 100%

- Function
- If charger is connected, and battery charging has completed
  - Time Remaining Text = "Full"
  - If Battery Level is >75%



### Battery High 75%

- Function
- If Battery Level is >50% between ≤75%



### Battery High 50%

- Function
- If Battery Level is >25% between ≤50%



### Battery High 25%

- Function
- If Battery Level is >10% between ≤25%



### Battery Low 10%

- Function
- If Battery Level is >2% between ≤10%



### Battery Empty 0% or Battery Error

- Function
- If Battery removed or charger error occurs
  - Flash Icon
  - Time Remaining Text = "Error"


### Battery Estimated Time Remaining Dynamic Text

- Function: Normal
- Display the estimated operational time remaining based on historical battery tracking
  - When Firmware is first programmed, reset the total time estimate and initiate a calibration process
  - Calibration can also be manually started in the Settings Menu
  - Continue tracking the battery state during normal use of the product to create a running average

- Function: Message Display
- Displays Remaining time in "h\*\*min" format, in green color
  - Displays "Charging" in orange color
  - Displays "Full" in green color
  - Displays "Empty" in red color
  - Displays "Error" in red color

- Function: Calibration
- Displays "Calibrating..." in Time Remaining Text
  - Step1: Fully Charge the unit
  - Step2: Let the product fully discharge
  - Repeat above steps 3 times
  - MCU Calculates the total number minutes from fully charged to fully discharged



## Information Display - Bluetooth Status indication

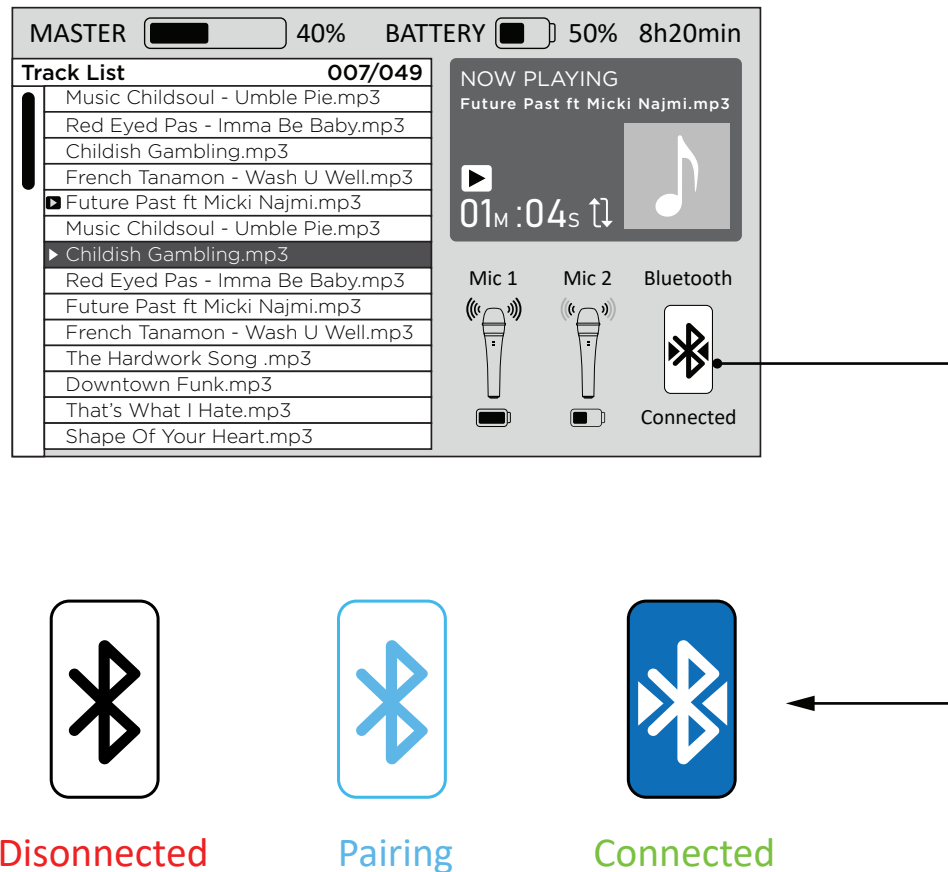

### Bluetooth Icon States

- State: Disconnected
  - Display White Bluetooth Icon
  - Display "Disconnected" State Text in Red Color
- State: Pairing (during pairing process)
  - Display Blue Bluetooth Icon
  - Display "Pairing" State Text **Flashing** in Blue Color
- State: Connected
  - Display Blue Filled Bluetooth Icon with connected triangles
  - Display "Connected" State Text in Green Color

Information Display - Music Player Menu

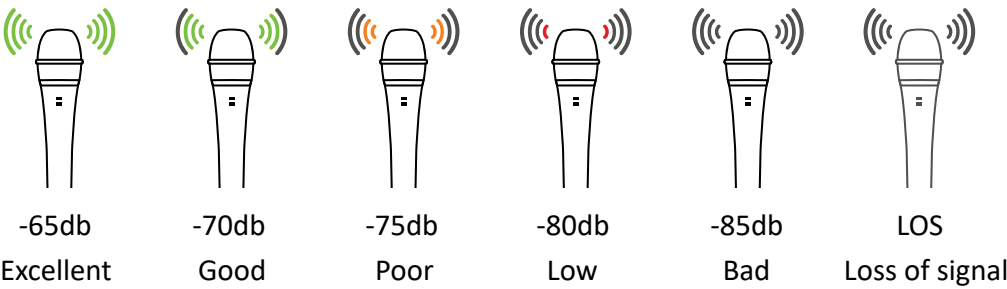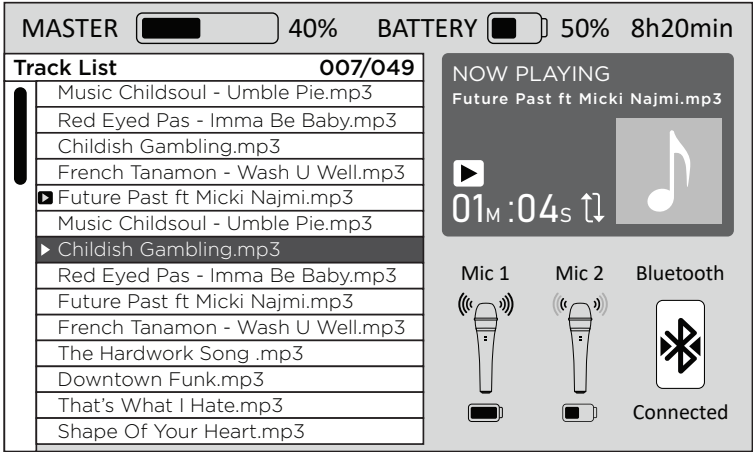

Microphone Icon States

- State: Good Signal
- Display the Signal Level in "db"
  - RSSI level is displayed in Green Color
- State: Poor Signal
- Display the Signal Level in "db"
  - RSSI level is displayed in Orange Color
- State: Low Signal
- Display the Signal Level in "db"
  - RSSI level is displayed in Red Color
- State: Loss of Signal "LOS"
- We use the greyed icon when the signal is too low, and the microphone is considered either "powered off" or out of range


## Settings Menu

To Enter the Settings Menu, Press the **MENU Button**

To Exit the Settings Menu and return to the Main Menu, Press the **MENU Button**

In the Settings Menu you can View & Adjust


1. Display Language
2. RF Receiver Region (View Only)
3. Bluetooth Pairing & Status
4. Wireless MIC #1 Channel & Frequency
5. Wireless MIC #1 Pairing & Status
6. Wireless MIC #2 Channel & Frequency
7. Wireless MIC #2 Pairing & Status
8. Alarm Sound
9. LCD Display Brightness
10. Key Backlight Brightness
11. Hardware Version (View Only)
12. Firmware Version (View Only)
13. Serial Number (View Only)
14. Power Consumption (View Only)
15. Battery Calibration
16. Factory Reset

MASTER <div><div></div></div> 40% BATTERY <div><div></div></div> 50% 8h20min	
SETTINGS  	Settings
	Language English
	RF Region Mainland China
	Bluetooth Connected
	MIC1 Channel CH1 (655.200MHZ)
	MIC1 Start Pairing Connected (CH1)
	MIC2 Channel CH2 (656.675MHZ)
	MIC2 Start Pairing Disconnected
	Alarm Sound Emergency Siren
	Display Brightness FULL
	Key Brightness FULL
	Hardware Version Rev x.x
	Firmware Version XXXX
	Serial Number AABCCDDEEFF
	Power Consumption xx.xx Watts
	Battery Calibration
	Factory Reset


1. Enter/Exit Setting Menu



2. Preview Option

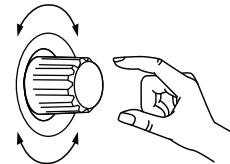

3. Select/Edit Options

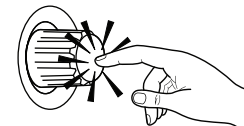


## Changing the Device Language

The P200 PRO supports 3 languages, English, Simplified Chinese & Italian. The displayed language can be adjusted by entering the Settings Menu and selecting the desired language from the list.

To adjust the desired language:

1. Press the **MENU** button to enter the Settings Menu
2. Rotate the Navigation Dial to highlight the **Language** option from the Settings List
3. Press the Navigation Dial to Select the **Language** option
4. Rotate the Navigation Dial to preview the selected language types
5. To select the displayed language, Press the Navigation Dial to **Save** the option


The device will remember this setting the next time you power on the unit.

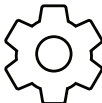MASTER <div></div> 40% BATTERY <div></div> 50% 8h20min	
SETTINGS 	Settings
	Language <span>► English</span>
	RF Region Mainland China
	Bluetooth Connected
	MIC1 Channel CH1 (655.200MHZ)
	MIC1 Start Pairing Connected (CH1)
	MIC2 Channel CH2 (656.675MHZ)
	MIC2 Start Pairing Disconnected
	Alarm Sound Emergency Siren
	Display Brightness FULL
	Key Brightness FULL
	Hardware Version Rev x.x
	Firmware Version XXXX
	Serial Number AABBCDDDEEFF
	Power Consumption xx.xx Watts
	Battery Calibration
	Factory Reset


1. Enter Setting Menu




2. Navigate To Language Option

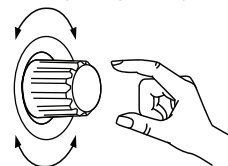


3. Select/Modify Language Setting

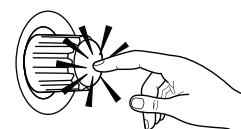


4. Preview Desired Language

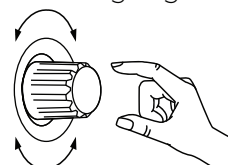

5. Select Desired Language

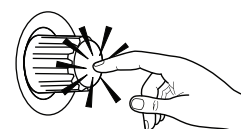

 6. Exit Setting Menu



## RF Receiver Region

The P200 wireless UHF receiver incorporate true-diversity dual (2) antenna technology per channel and are calibrated from the factory. This setting is View Only and can not be modified. Each Country has its own regulation and licensed bandwidth criterial. Below are the RF region details and channel / frequency available in the settings menu.

Mainland China UHF Channel Selection  
Frequency Range: 655Mhz – 679Mhz  
Bandwidth: 24Mhz  
Channel Presets: 16ch

Hong Kong / Macau UHF Channel Selection  
Frequency Range: 514Mhz – 542Mhz  
Bandwidth: 28Mhz  
Channel Presets: 16ch

Taiwan UHF Channel Selection  
Frequency Range: 748Mhz – 758Mhz  
Bandwidth: 10Mhz  
Channel Presets: 12ch

MASTER  40% BATTERY  50% 8h20min

SETTINGS

Settings

Language	English
RF Region	► Mainland China
Bluetooth	Connected
MIC1 Channel	CH1 (655.200MHZ)
MIC1 Start Pairing	Connected (CH1)
MIC2 Channel	CH2 (656.675MHZ)
MIC2 Start Pairing	Disconnected
Alarm Sound	Emergency Siren
Display Brightness	FULL
Key Brightness	FULL
Hardware Version	Rev x.x
Firmware Version	XXXX
Serial Number	AABBCCDDEEFF
Power Consumption	xx.xx Watts
Battery Calibration	
Factory Reset	

## Bluetooth Pairing


The P200 PRO can pair with Bluetooth Audio Sources to stream A2DP music and audio

To pair the Bluetooth of the P200 PRO:

1. Press the **MENU** Button enter the Settings Menu
2. Rotate the Navigation Dial to highlight the **Bluetooth Pairing** option from the Settings List
3. Press the Navigation Dial to Activate the **Bluetooth Pairing** process. **Pairing** will be displayed
4. All previously paired/connected devices will be removed
5. On your mobile device turn on your Bluetooth and Scan for New Devices
6. Search for the "**P200 PRO**" name in the device list and confirm pairing with the New Device
7. Once the connection is successful you will see "Connected" listed in the Status Box

After pairing is successful, the P200 PRO will automatically reconnect with the Bluetooth source each time the PA speaker is powered on.

**\*\*The Speaker does not support Bluetooth HFP or HSP profiles (wireless phone call with microphone)**

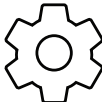MASTER <div></div> 40% BATTERY <div></div> 50% 8h20min	
SETTINGS 	Settings
	Language English
	RF Region Mainland China
	Bluetooth ► Connected
	MIC1 Channel CH1 (655.200MHZ)
	MIC1 Start Pairing Connected (CH1)
	MIC2 Channel CH2 (656.675MHZ)
	MIC2 Start Pairing Disconnected
	Alarm Sound Emergency Siren
	Display Brightness FULL
	Key Brightness FULL
	Hardware Version Rev x.x
	Firmware Version XXXX
	Serial Number AABCCDDEEFF
	Power Consumption xx.xx Watts
	Battery Calibration
	Factory Reset

## Wireless MIC Channel & Frequency

The P200 Wireless UHF Microphones and Receiver have up to 12/16 preset channels that can be selected based on the country / region.

The P200 incorporates an automatic pairing process that make the microphones pairing and channels selection process easy. You are also allowed to manually choose the channel you wish to use.

### Mainland China UHF Channel Selection

Preset	CH 1	CH 2	CH 3	CH 4	CH 5	CH 6	CH 7	CH 8
MHz	655.200	656.675	658.500	660.050	661.500	665.900	664.425	666.500
Preset	CH 9	CH 10	CH 11	CH 12	CH 13	CH 14	CH 15	CH 16
MHz	667.800	668.225	670.800	672.275	673.725	675.075	676.500	678.600

### Hong Kong / Macau UHF Channel Selection

Preset	CH 1	CH 2	CH 3	CH 4	CH 5	CH 6	CH 7	CH 8
MHz	514.400	515.450	516.400	517.550	519.150	520.450	521.850	523.750
Preset	CH 9	CH 10	CH 11	CH 12	CH 13	CH 14	CH 15	CH 16
MHz	525.500	527.550	528.550	530.000	534.150	536.550	538.800	541.450

### Taiwan UHF Channel Selection

Preset	CH 1	CH 2	CH 3	CH 4	CH 5	CH 6	CH 7	CH 8
MHz	748.200	748.500	749.000	750.000	750.350	751.200	753.700	754.825
Preset	CH 9	CH 10	CH 11	CH 12				
MHz	755.400	756.450	756.850	757.750				



## Automatic Channel Selection & Microphone Pairing Process

The automatic microphone pairing process removes the headache of trying to find the best channel in your location. Choosing the best channel means you will have the most stable wireless connection and the microphone will have the most optimal broadcasting range.

### Perform this procedure if you are experiencing microphone interference or range limitation

#### How does the Automatic Microphone Pairing Process Work?

When the user selects the **AUTO** channel selection feature from the Settings Menu, the P200 PRO will automatically **scan and analyze** every channel available and determine which channel has the least radio traffic interference. Once the most optimal channel has been determined, the P200 PRO will then continue the normal pairing process, and send the updated configuration to the microphone transmitter.

#### Perform the 3-step Automatic Microphone Pairing Process:

1. Prepare the M20 Microphone for Pairing
  - a. Remove the Microphone Battery Cover
  - b. Turn the Microphone ON, it should display a Blue color indicator
  - c. Make sure the IR Pairing window is free from obstructions
2. Prepare the P200 PRO for Automatic Channel Analyzing
  - a. Press the **MENU** Button to enter the Settings Menu
  - b. Decide which Receiver to pair the Microphone too: MIC1? or MIC2?
  - c. Rotate the Navigation Dial to highlight the desired **MIC# Receiver** from the Settings List
  - d. Press the Navigation Dial to Select the **MIC# Channel** you want to change
  - e. Rotate the Navigation Dial and select **AUTO** from the Settings List
  - f. Press the Navigation Dial to confirm the desired Automatic Scanning to be used for microphone pairing
3. Perform the Microphone Pairing Process
  - a. Rotate the Navigation Dial to highlight the **MIC# Start Pairing** option from the Settings List
  - b. Press the Navigation Dial to Initiate the pairing process
  - c. The Radio will indicate "**Radio Searching...**" indicating that it is analyzing all available channels
  - d. After the Radio Channel analysis is complete for the MIC1 or MIC2, the P200 will immediately enter the microphone pairing process.
  - e. Place the M20 microphone within 5" (10cm) from the blinking pairing light on the P200 PRO. This will allow the P200 PRO to send the updated command information to the microphones IR receiver. Its important not to obstruct and direct the blinking light towards the microphones IR receiver window.
  - f. Once the process has successfully completed and can receive data from the connected microphone, the P200 PRO will display **Connected CH#** in the **MIC# Start Pairing** option
  - g. You will see the updated Channel and Frequency that the P200 PRO has determined to be the most optimal in the **MIC# Receiver** options list
  - h. If the display says **Disconnected** in the **MIC# Start Pairing** option after the pairing process has completed and the LED Pairing Light has stopped blinking, than the communication from the P200 PRO to the M20 Microphone was unsuccessful and you will need to perform the automatic pairing process again.

## Manual Channel Selection & Microphone Pairing Process

If you are an advanced user and wish to choose the M20 Microphones Transmission Frequency directly, than use this option to update the Transmission Frequency of the M20 Microphone


### Perform the 3-step Manual Microphone Pairing Process:

1. Prepare the M20 Microphone for Pairing
  - a. Remove the Microphone Battery Cover
  - b. Turn the Microphone ON, it should display a Blue color indicator
  - c. Make sure the IR Pairing window is free from obstructions
2. Manually Select the P200 PRO's Frequency / Channel
  - a. Press the **MENU** Button to enter the Settings Menu
  - b. Decide which Receiver to pair the Microphone too: MIC1? or MIC2?
  - c. Rotate the Navigation Dial to highlight the desired **MIC# Receiver** from the Settings List
  - d. Press the Navigation Dial to Select the **MIC# Channel** you want to change
  - e. Rotate the Navigation Dial and select **CH#** Channel Number and Frequency from the Settings List
  - f. Press the Navigation Dial to confirm the desired Channel Number and Frequency to be used for microphone pairing
3. Perform the Microphone Pairing Process
  - a. Rotate the Navigation Dial to highlight the **MIC# Start Pairing** option from the Settings List
  - b. Press the Navigation Dial to Initiate the pairing process
  - c. Place the M20 microphone within 10" (20cm) from the blinking pairing light on the P200 PRO. This will allow the P200 PRO to send the updated command information to the microphones IR receiver. Its important not to obstruct and direct the blinking light towards the microphones IR receiver window.
  - d. Once the process has successfully completed and can receive data from the connected microphone, the P200 PRO will display **Connected CH#** in the **MIC# Start Pairing** option
  - e. If the display says **Disconnected** in the **MIC# Start Pairing** option after the pairing process has completed and the LED Pairing Light has stopped blinking, than the communication from the P200 PRO to the M20 Microphone was unsuccessful and you will need to perform the manual pairing process again

## Microphone/Input Voice Enhancer – **FX Button**

The P200 PRO incorporates an (FX Effects) Voice Enhancing Digital Signal Processor that can modify the entertainment effects of the microphone and analog inputs. Users can easily toggle this feature on/off and adjust different parameters to modify the input tonality and reverb / echo effects.


The FX feature affects wireless MIC1 & MIC2 as well as the Mic-In and Line-In analog input connections

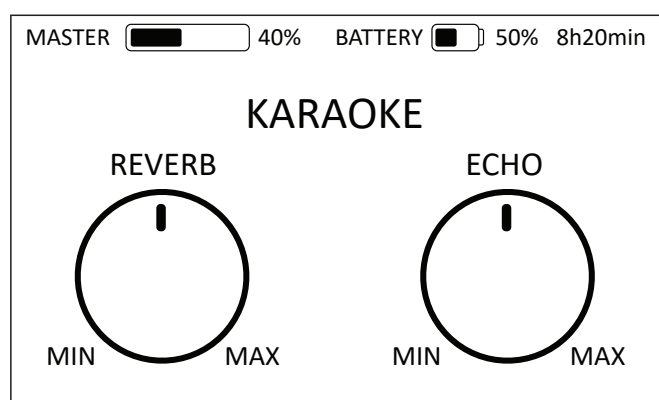


### Turning ON/OFF the FX Effects

- Short Press The  **FX Button** to toggle the Input effects ON or OFF

### Enter the FX Effect Settings Menu

1. Press and Hold the  **FX Button** for 2 Seconds
2. Rotate the Navigation Dial to adjust the selected effects settings
3. Press the Navigation Dial to toggle between REVERB and ECHO settings


### Exit the FX Effect Settings Menu

- Pressing any of the  **FX Button** , **MENU** , or **USB** buttons will exit the FX effects settings menu

### \*Inputs with FX Effects Feature


- 1/4" Microphone-In
- 3.5mm Aux-In
- Wireless MIC 1
- Wireless MIC 2

### Toggle the FX Effects ON/OFF

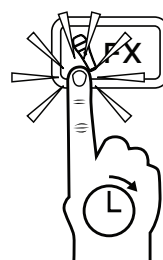

**Short press  
<1sec**

### Enter the FX Editing Screen

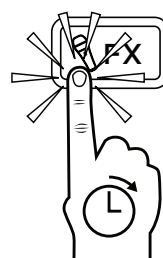

**Long press  
>2sec**

## Technical Specifications

P200 PRO	
System	
Model Number	P200 PRO
CPU System	Dual Core, 1.0Ghz, 64MB RAM
Display	4.0" Full-Color, IPS, 800*480pix
Features	Audio/Visual Media Player, True-Diversity Dual UHF Receivers, Bluetooth, Analog 3.5mm, 1/4" Microphone & 5-Channel Mixer. Siren, Alarm and Microphone Effects
Interface	Adjustable Backlight Keypad Adjustable Brightness Display 2-Axis Navigation control USB & MicroSD Removable Media
Media Player	
Controls	Play/Pause, Stop, Record, Previous & Next Track, Track/Playlist Repeat
Media Preview	Song List Album Cover Supports 1,000 Audio Tracks
File System	FAT 16/32 or NTFS
Removable Media	USB 2.0 + MicroSD UHS-1
Bitrates Supported	32-320kbps
Audio Formats	MP3, WAV, AAC
Record Feature	Encoded to MP3
Audio	
Amplifier Rated Power	50 Watt
Frequency Response	35 - 18,000 Hz $\pm$ 3dB
Max SPL <sup>1</sup>	105 dB
Driver	5" Full Range
Analog input	3.5mm Line-In 1/4" Microphone Input
Analog output	3.5mm Line-Out
DSP	SigmaDSP® 50-MIPS Digital Audio Processor Microphone Effects 5 Channel Mixer

Bluetooth Wireless	
Bluetooth Version	V5.3
Bluetooth Profile	A2DP, AVRCP, SBC, AAC
Frequency Band	2.400GHz - 2.483GHz ISM Band / 20dBm (Class 2)
Bluetooth Range	10 m / 30 ft (free space)
UHF Wireless	
RF Technology	Analog UHF True Diversity Receivers 4-Integrated Antennas
Option #1	UHF 655-679MHz 24MHz Bandwidth 16 Channels
Option #2	UHF 514-542MHz 28MHz Bandwidth 16 Channels
Option #3	UHF 748-758MHz 10MHz Bandwidth 12 Channels
Microphone Pairing	Infrared Transmitter
General	
Accessories	(2) M20 Wireless Microphones (1) Integrated 5/8" Tripod Mount <sup>2</sup> (1) Detachable Shoulder Strap
Battery Pack	Removable / Replaceable Lithium-Ion Battery Pack INR26650-4S1P 14.4V @ 5,000mAh, 72.0Wh
Charging Time	Approx. 3hrs
Autonomous time <sup>3</sup>	Approx. 16hrs
Power Supply	100-240VAC @ 50/60Hz 19VDC @ 2.5A (47-Watts)
Dimensions (WxHxD)	148(W) x 148(H) x 296(D) mm
P200 Weight <sup>4</sup>	2.2 kg
All-in-One Weight <sup>5</sup>	2.7 kg

<sup>1</sup> Maximum SPL at 1 m calculated using crest factor 4 (12dB)

<sup>2</sup> Tripod Sold Separately

<sup>3</sup> Playtime varies based on number of receivers turned on and the loudness and music setting.

<sup>4</sup> Gross Weight Including P200 & Battery (not include microphones)

<sup>5</sup> Gross Weight Including two (2) M20 Microphones and Batteries

## Technical Specifications

M20 Microphone	
System	
Model Number	M20
Microphone Type	Dynamic
Frequency Response	40-18,000 Hz
UHF Transmission Range	Dynamic
Option #1	UHF 655-679MHz 24MHz Bandwidth 16 Channels
Option #2	UHF 514-542MHz 10MHz Bandwidth 16 Channels
Option #3	UHF 748-758MHz 20MHz Bandwidth 12 Channels
UHF Transmission Power	20-50mW
Microphone Pairing	Infrared Receiver
General	
Battery	Removable / Replaceable Lithium-Ion Battery ICR18500 3.7V @ 1,400mAh, 5.18Wh
Interface	Power Switch RGB LED for Power/Charging Status
Charging Time	Approx. 3hrs
Autonomous time <sup>1</sup>	Approx. 20hrs
Radio Range	30 m / 100 ft (free space)
USB-C Charger <sup>2</sup>	5V <sub>DC</sub> @ 1.0A (5-Watts)
Dimensions (WxDxH)	50(W) x 50(D) x 200(H) mm
Weight <sup>3</sup>	250 gm

<sup>1</sup> Playtime varies based on level on RF interference in the environment and transmission power setting

<sup>2</sup> USB-C cable and Charger Sold Separately

<sup>3</sup> Gross Weight Including Removable Battery

## Service

To obtain service:




1. Please have the serial number of the unit available for reference.
2. Contact <https://www.artsound.com.cn/support>  
Please describe the problem clearly and completely to the Customer Service.
3. You will be contacted back for online servicing.
4. If the problem cannot be resolved over the phone, you may be required to send the unit in for service. In this instance, you will be provided with an RA (Return Authorization) number which should be included on all shipping documents and correspondence regarding the repair. Shipping charges are the responsibility of the purchaser.

Any attempt to modify or replace components of the device will void your warranty. Service must be performed by an authorized ARTSOUND service center.


## Cleaning

Use only a soft, dry cloth to clean the housing. Do not use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia, or abrasives. Do not use any sprays near the product or allow liquids to spill into any openings.


P200 PRO Size & Dimensions

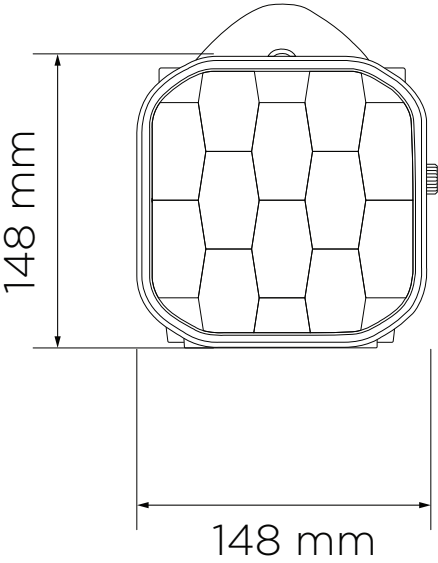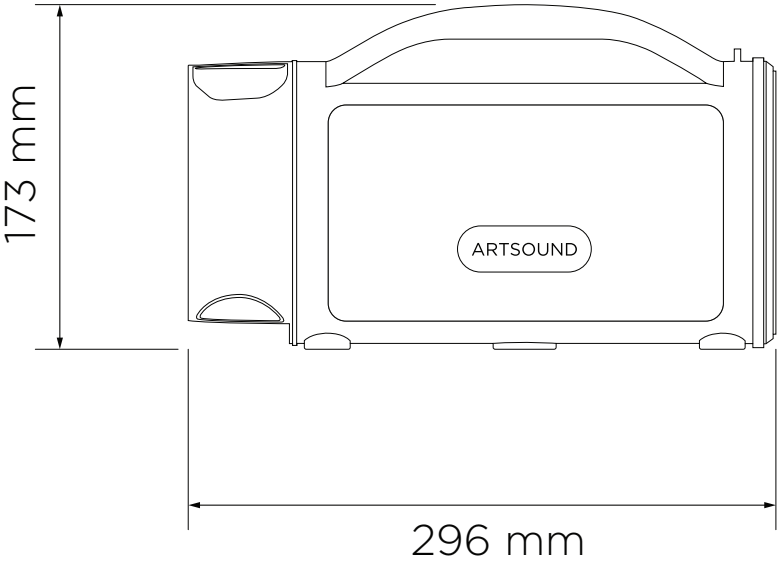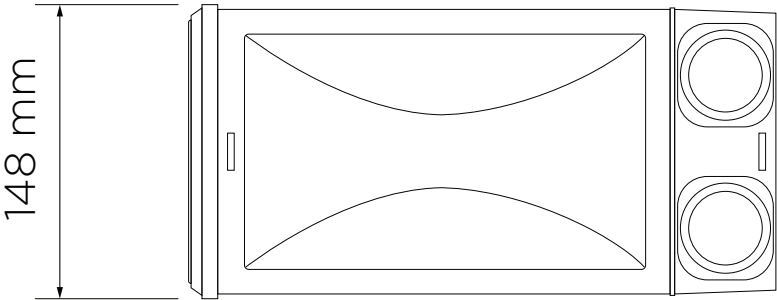

M20 Size & Dimensions

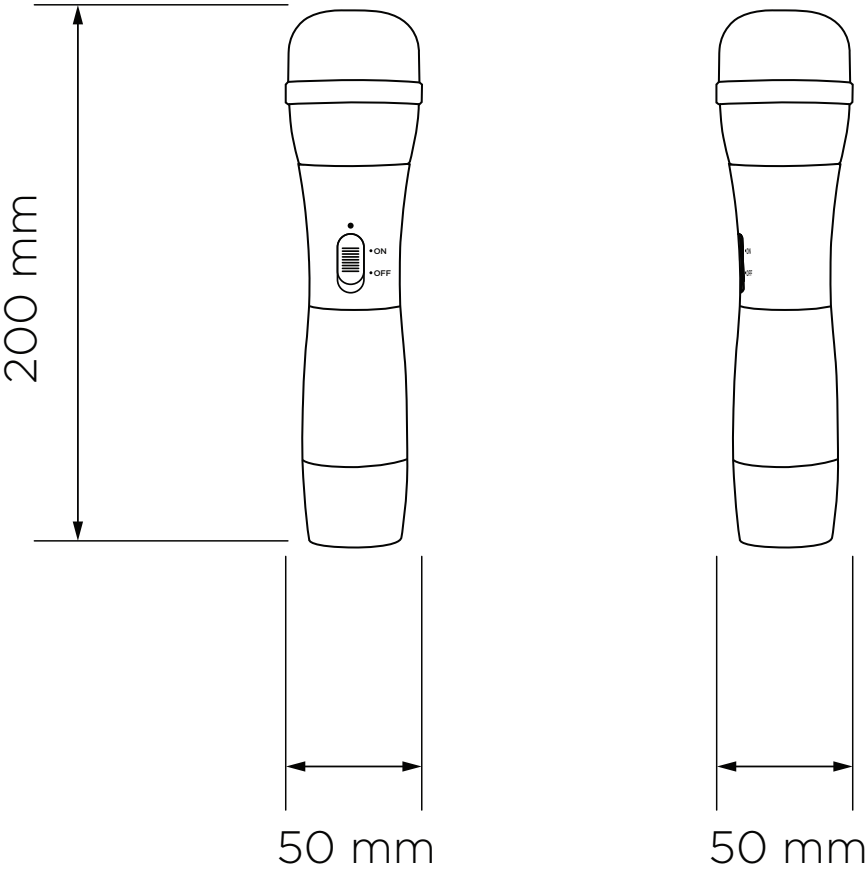

Packaging Size & Dimensions

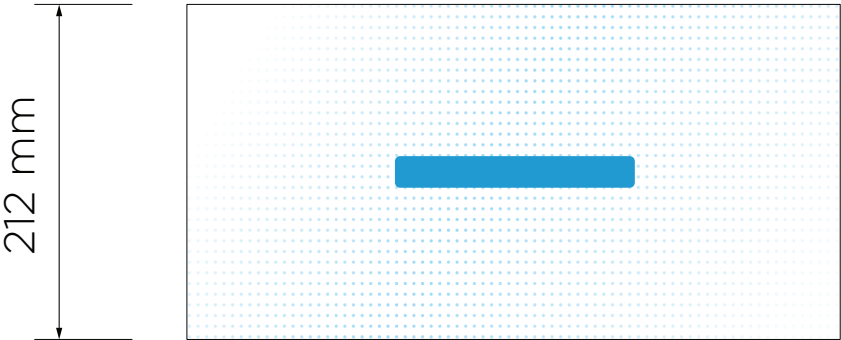



# ARTSOUND P200 PRO

Technical Support  
For additional information or support with your  
product please visit our website



[www.artsound.com.cn/support](http://www.artsound.com.cn/support)